



Differential lock

from September 1991

Position of relays:
also see "Fitting Locations"

Relay plate with fuse holder:

Auxiliary relay carrier: front
(below dash panel, left)

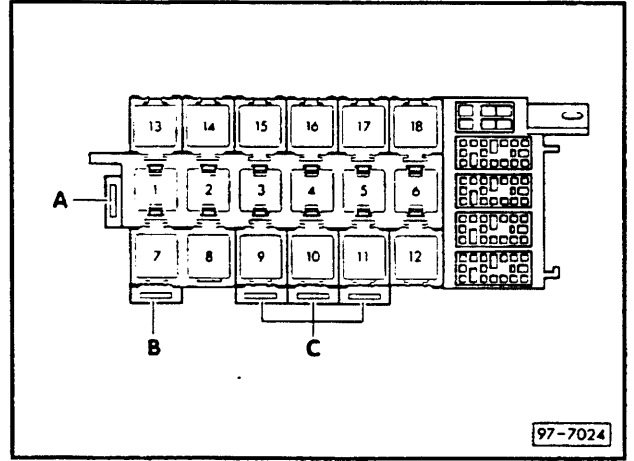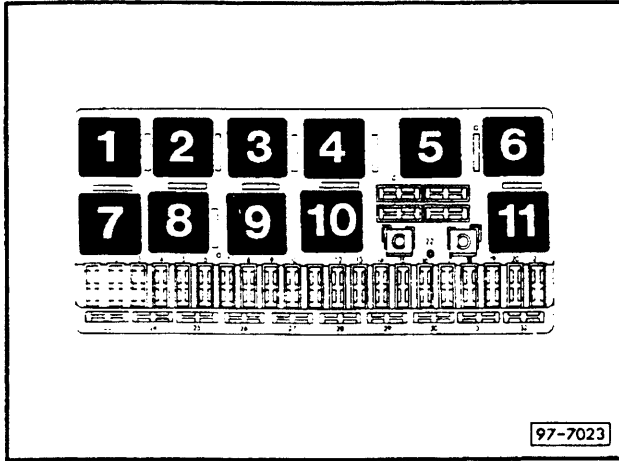


Relay positions:

Relay positions:

Fuse colours:


- 30 A – green
- 25 A – colourless (white)
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – light brown

Auxiliary relay carrier, rear
(under rear seat, left)

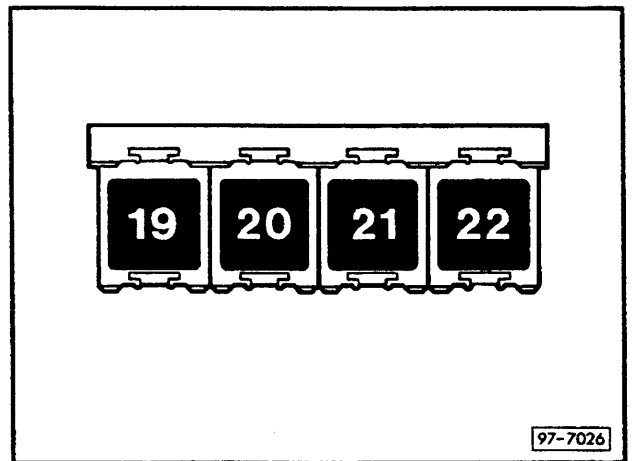

Relay positions:

Differential lock

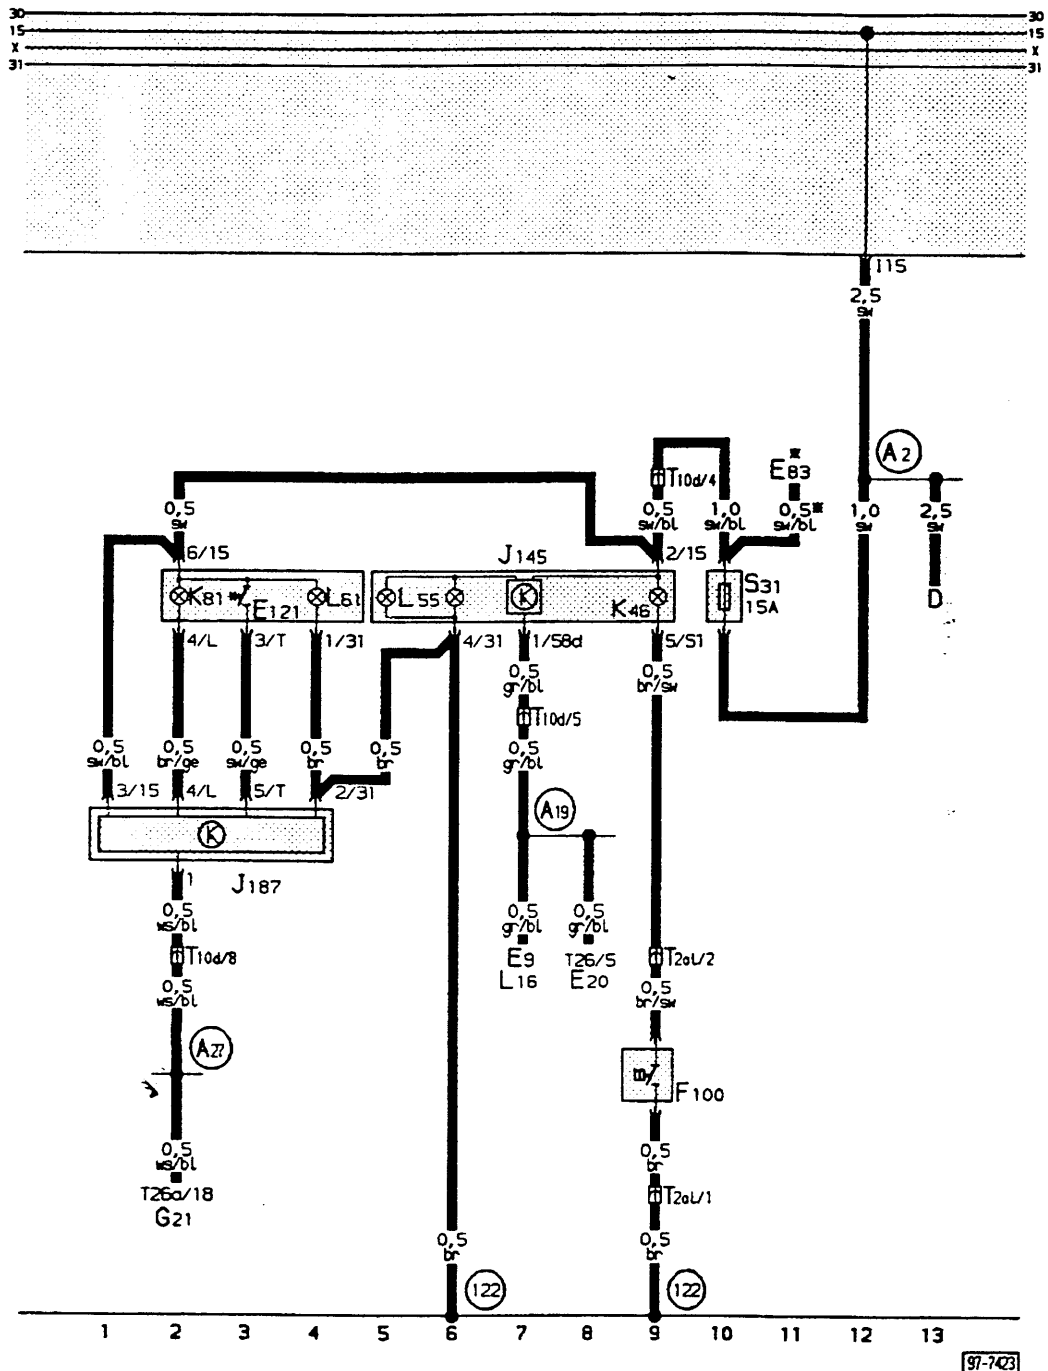

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- D - Ignition/starter switch
- E 9 - Fresh air fan switch
- E 20 - Dimmer for instrument panel lights and switches
- E 83 - ABS switch
- E 121 - Switch for rear differential lock
- F 100 - Rear differential lock switch (on rear differential)
- G 21 - Speedometer
- J 145 - Display unit
- J 187 - Differential lock control unit
- K 46 - Rear differential lock warning lamp
- K 81 - Differential lock warning lamp
- L 16 - Light for fresh air controls
- L 55 - Light for differential lock indicator
- L 61 - Differential lock switch illumination
- S 31 - Fuse for differential lock (in aux. relay carrier)
- T 2a1 - Connector 2 pin, white, under rear seat, left
- T 10d - Connector 10 pin, blue, connector point in aux. relay carrier

- T 26 - Connector 26 pin, yellow, on dash panel insert
- T 26a - Connector 26 pin, blue, on dash panel insert
- (122) - Earth connection, in wiring loom, differential lock
- (A2) - Plus connection (15), in dashboard wiring loom
- (A19) - Wiring connection (58d), in dash panel wiring loom
- (A27) - Wiring connection (speed signal), in dash panel wiring loom
- * - only with anti-lock brake system

97-7423