


Headlights, side lights, tail lights, brake lights, reversing lights

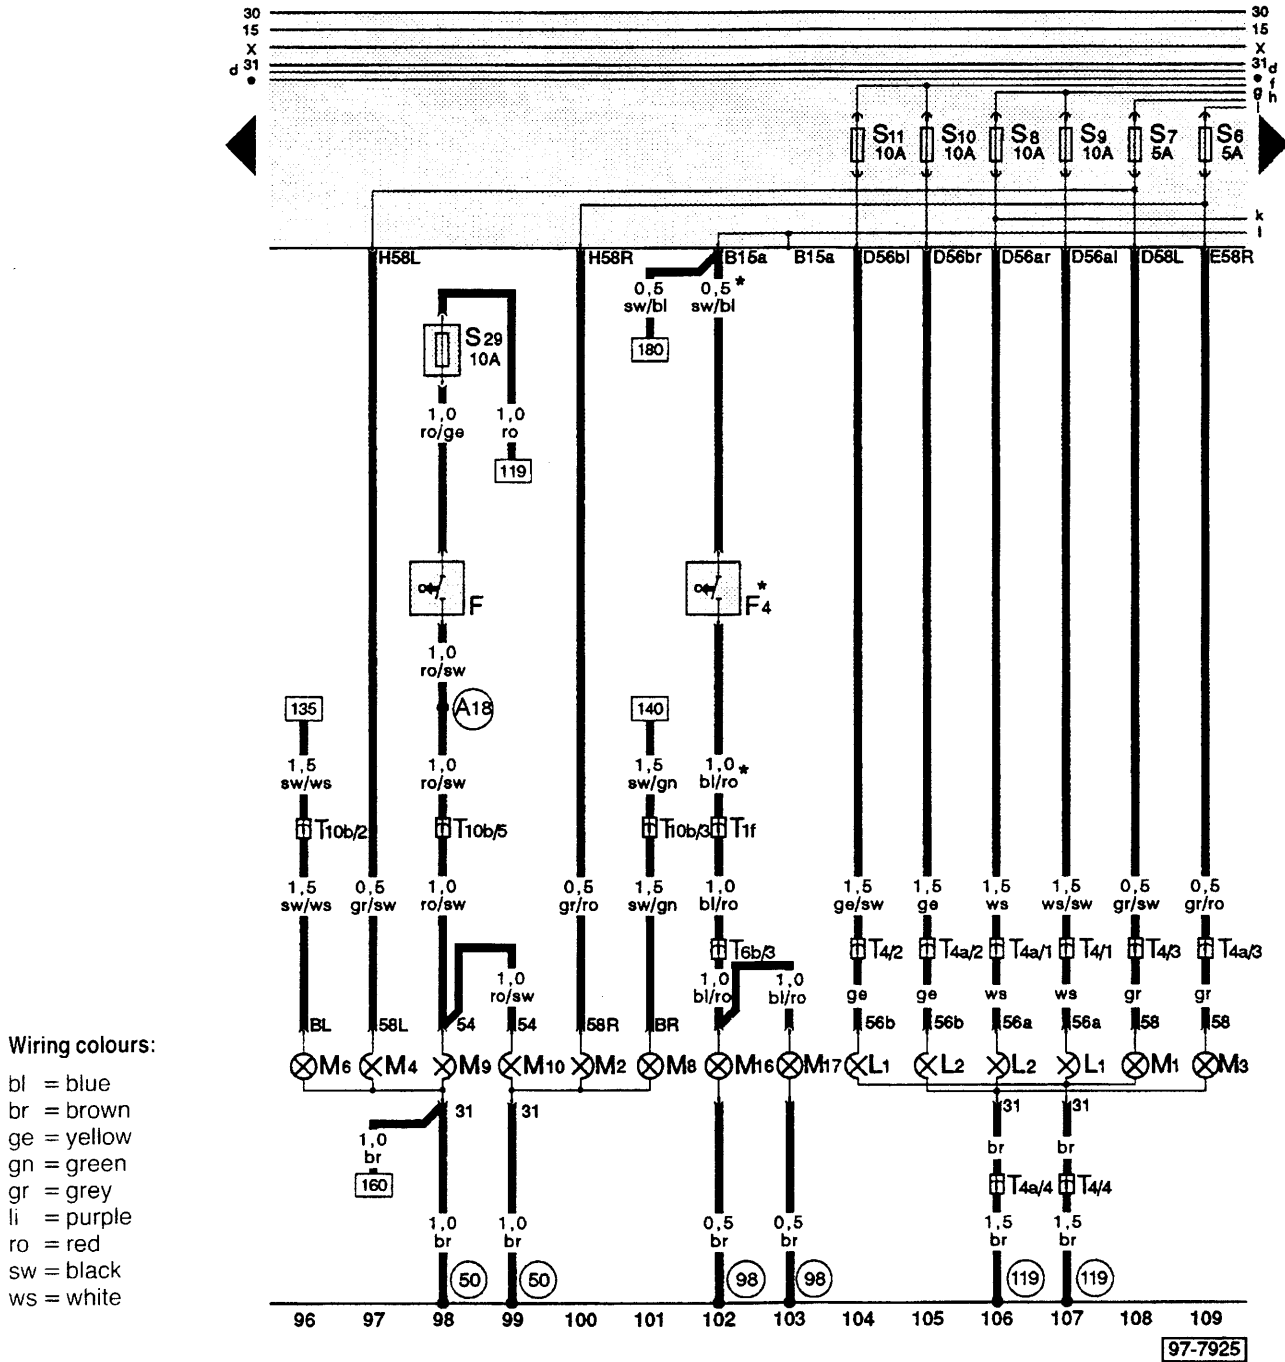

- F – Brake light switch
- F 4 – Reversing light switch
- L 1 – Twin filament bulb, for left headlight
- L 2 – Twin filament bulb, for right headlight
- M 1 – Side light bulb, left
- M 2 – Tail light bulb, right
- M 3 – Side light bulb, right
- M 4 – Tail light bulb, left
- M 6 – Rear left turn signal bulb
- M 8 – Rear right turn signal bulb
- M 9 – Brake light bulb, left
- M 10 – Brake light bulb, right
- M 16 – Reversing light bulb left
- M 17 – Reversing light bulb right
- S 29 – Separate fuse for brake lights (in additional fuse holder)
- T 1f – Connector single, black, behind dash panel, left
- T 4 – Connector 4 pin – Earth strap, tailgate – roof
- T 4a – Connector 4 pin, near headlight, right

- T 6b – Connector 6 pin, black, in luggage boot, left
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- (50) – Earth point, luggage boot, left
- (98) – Earth connection, in tailgate wiring loom
- (119) – Earth connection – 1 – , in headlight wiring loom
- (A18) – Connection (54), in dash panel wiring loom
- * – only on vehicles with manual gearbox