


Fresh air blower, radio, heated rear window

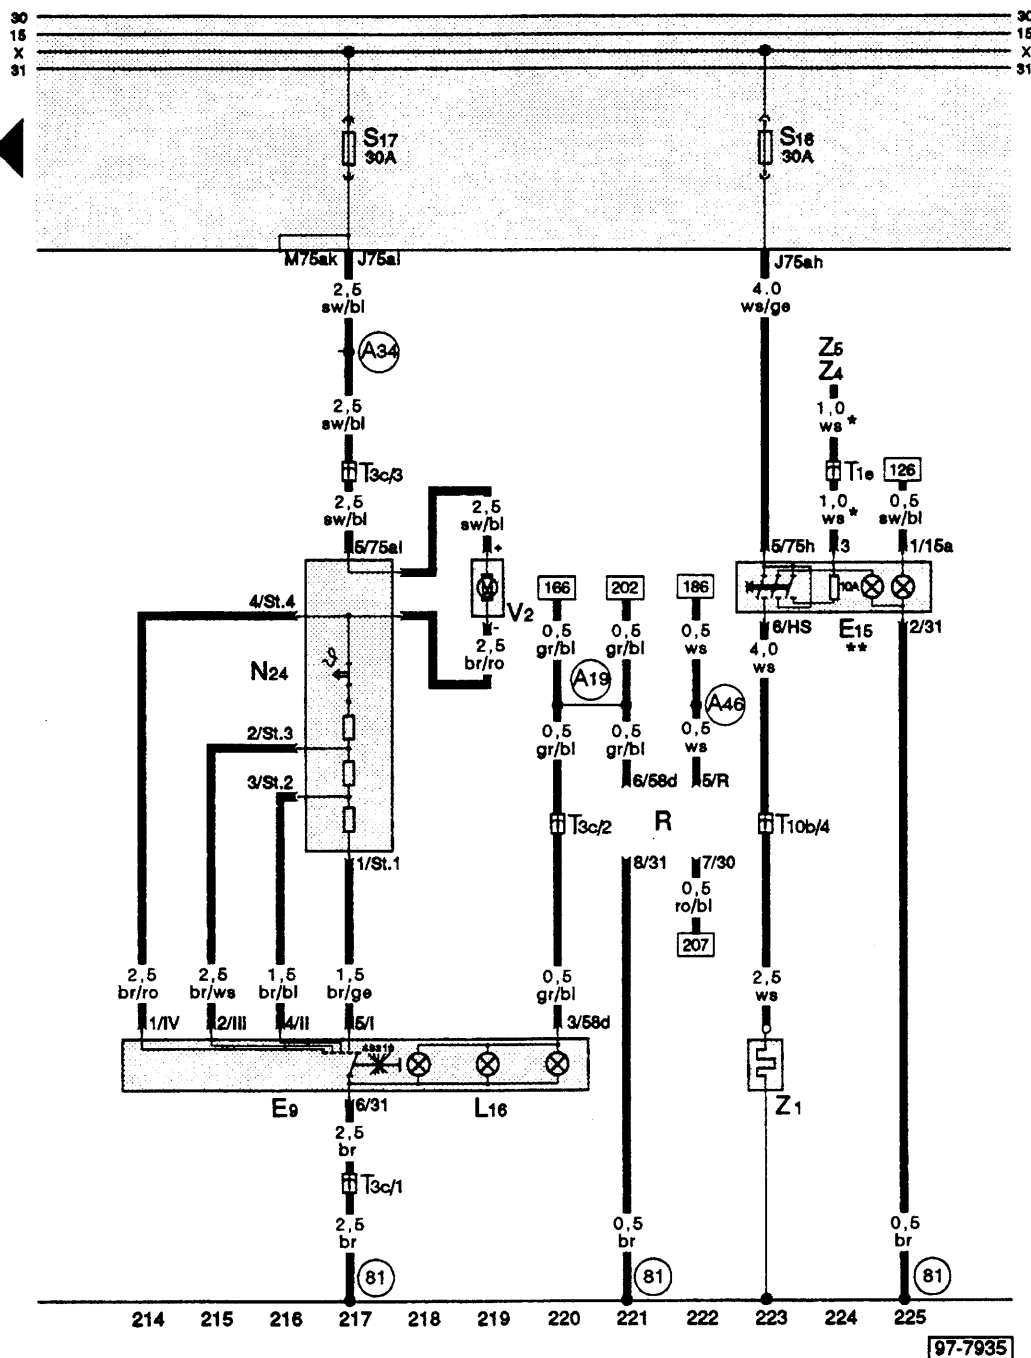

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 9 – Fresh air blower switch
- E 15 – Heated rear window switch
- L 16 – Fresh air controls light bulb
- N 24 – Series resistance for fresh air blower with overheating fuse
- R – Radio
- T 1e – Connector single, green, behind dash panel, left
- T 3c – Connector 3 pin, brown, behind dash panel, centre
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- V 2 – Fresh air blower
- Z 1 – Heated rear window
- Z 4 – Heated outer mirror (driver's side)
- Z 5 – Heated outer mirror (passenger side)
- Ⓢ1 – Earth connection – 1 –, in dash panel wiring loom
- Ⓢ19 – Connection (58d), in dash panel wiring loom
- Ⓢ34 – Connection (75x), in dash panel wiring loom

- Ⓢ46 – Positive (+) connection (30 – from radio), in dash panel wiring loom
- \* – only with electrically adjustable and heated outside mirrors
- \*\* – See Current flow diagram No. 89 for illustration of heated rear window (vehicles with air conditioner)

97-7935