


Headlight beam height control

from July 1992


Position of relays –
also see “Fitting Locations”

Relay plate with fuse holder:

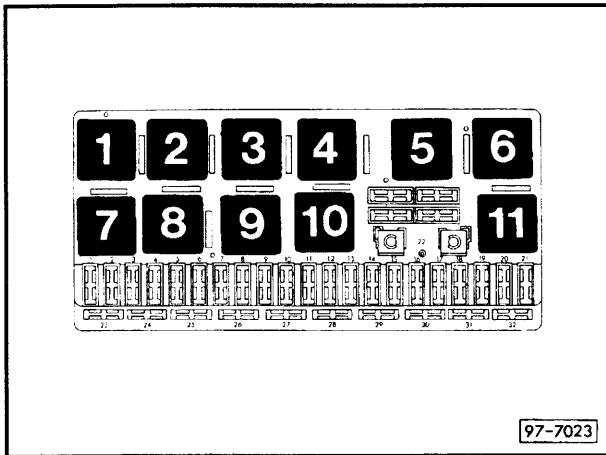

Position of relays:

Auxiliary relay carrier, front
(under dash panel, left)

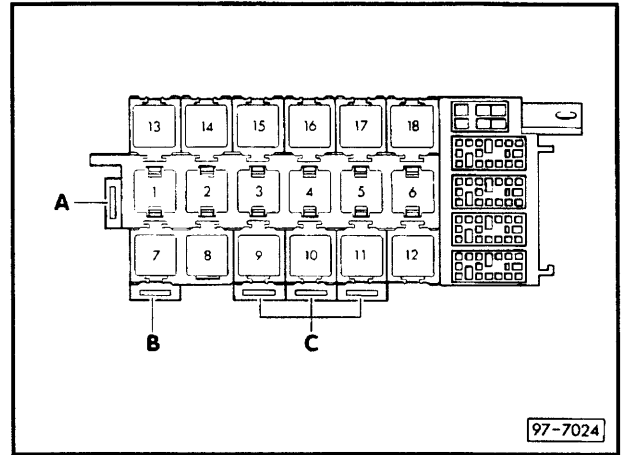


Position of relays:

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear
(under rear seat bench, left)

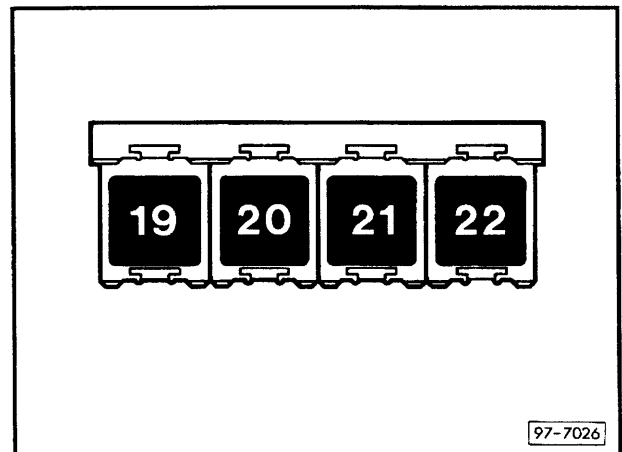

Position of relays:

Headlight beam height control

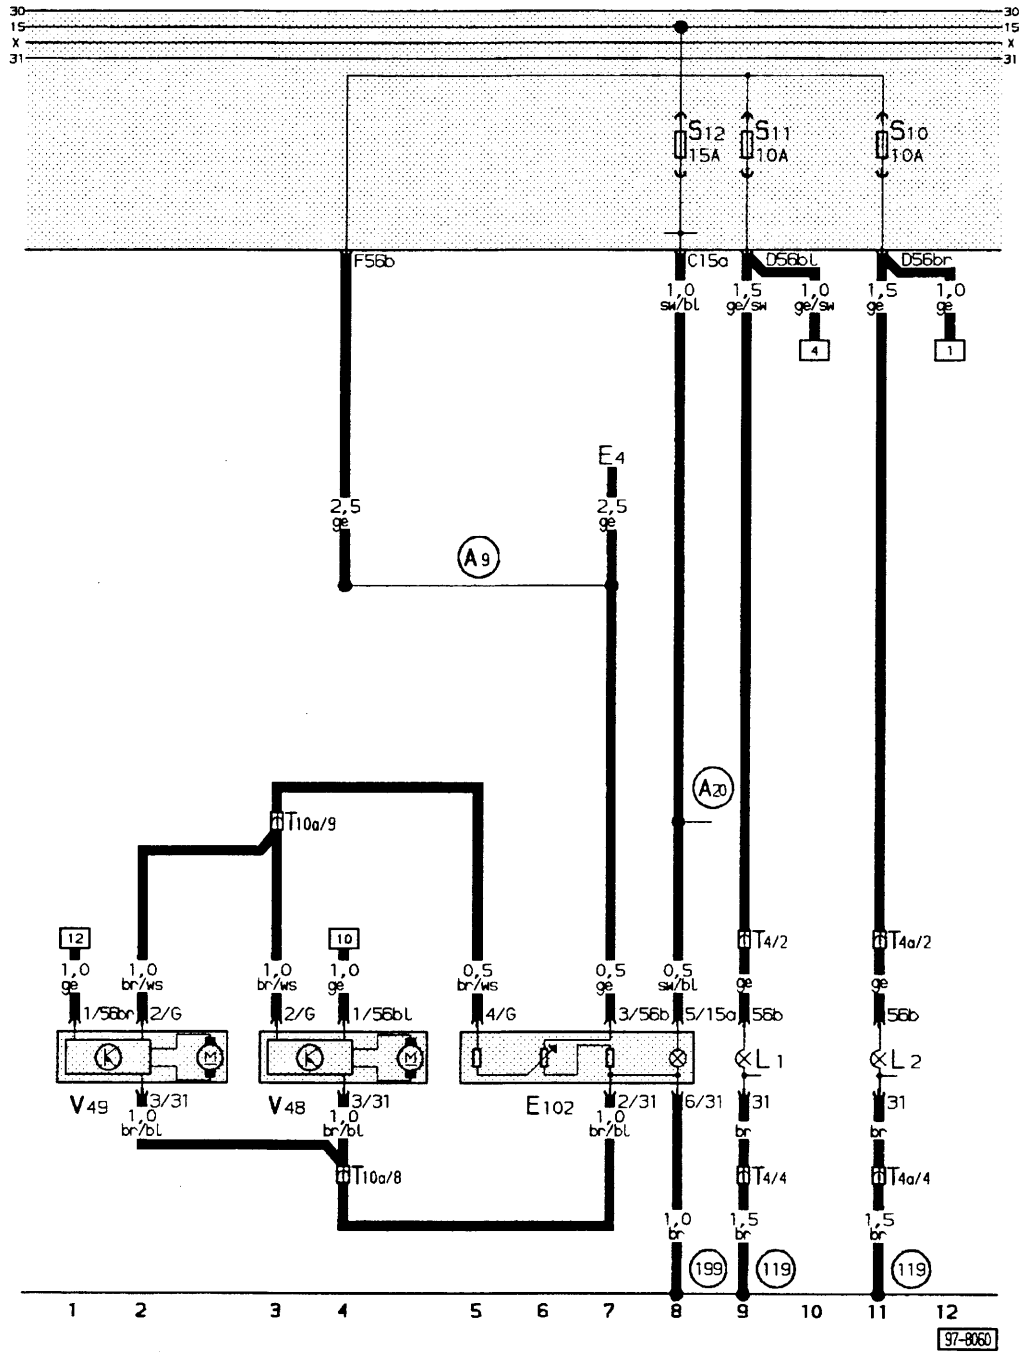

Wiring colours:

- ro = red
- sw = black
- br = brown
- ge = yellow
- gn = green
- bl = blue
- gr = grey
- ws = white
- li = purple

- E 4 – Headlight dipper/flasher switch
- E 102 – Headlight beam adjuster
- L 1 – Twin filament bulb for left headlight
- L 2 – Twin filament bulb for right headlight
- T 4 – Connector 4 pin, near headlight, left
- T 4a – Connector 4 pin, near headlight, right
- T 10a – Connector 10 pin, yellow, connector point in aux. relay carrier
- V 48 – Motor, left for beam adjustment
- V 49 – Motor, right for beam adjustment
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (119) – Earth connection – 1 –, in headlight wiring loom
- (A9) – Positive (+) connection (56 b), in dash panel wiring loom
- (A20) – Connection (15a), in dash panel wiring loom