


Cruise control system


From Juli 1992

**Position of relays –
also see “Fitting Locations”
Relay plate with fuse holder**

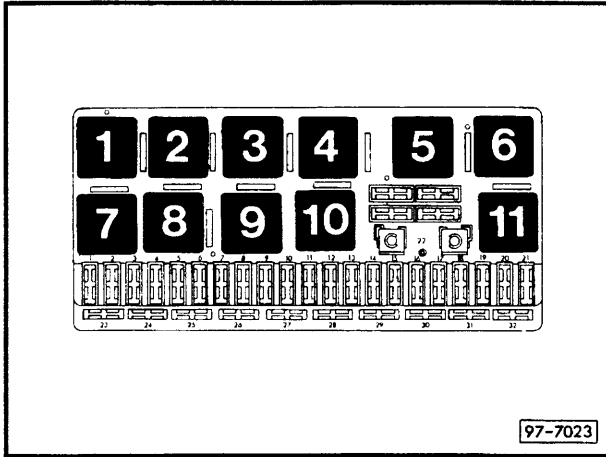

Position of relays:

**Auxiliary relay carrier, front
(under dash panel, left)**

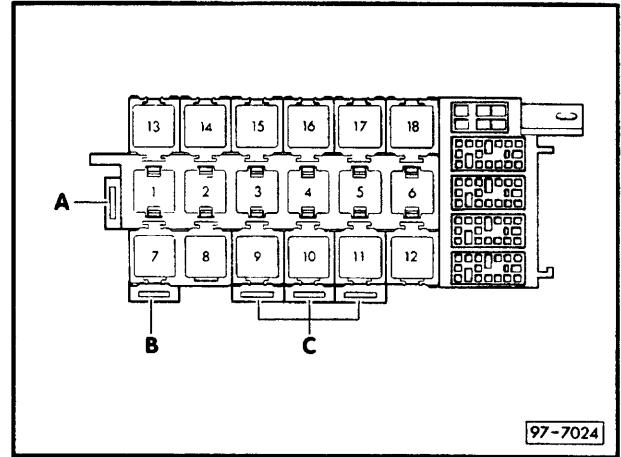


Position of relays:

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

**Auxiliary relay carrier, rear
(under rear seat bench, left)**

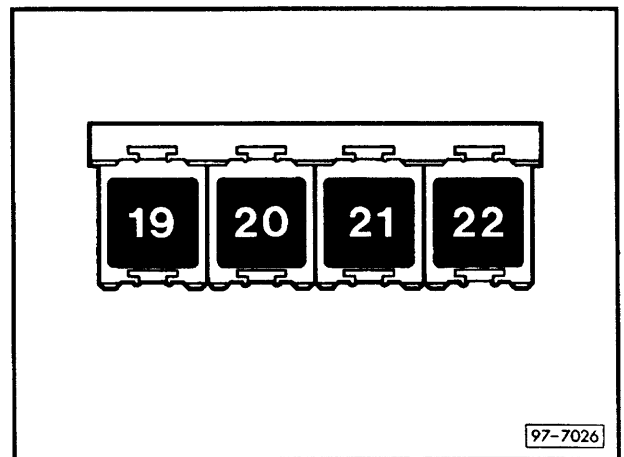

Position of relays:

Cruise control system

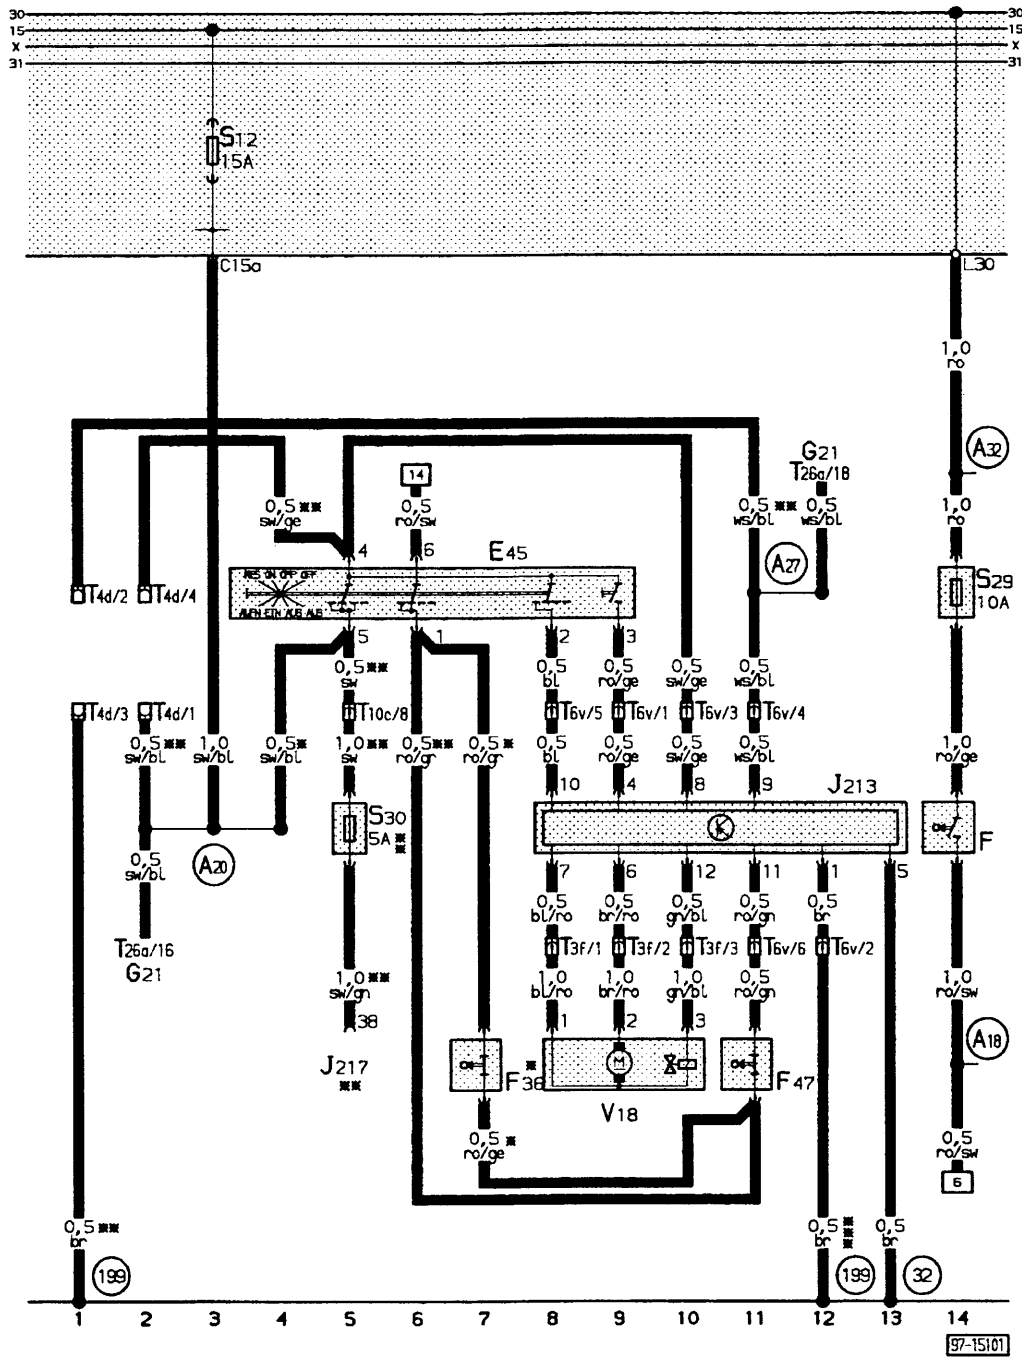

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 45 – Switch for cruise control system
- F – Brake light switch
- F 36 – Clutch pedal switch
- F 47 – Brake pedal switch for cruise control
- G 21 – Speedometer
- J 213 – Control unit for cruise control
- J 217 – Control unit for automatic gearbox
- S 29 – Fuse for brake lights (in additional fuse holder)
- S 30 – Fuse for cruise control system with 4-speed automatic gearbox (in additional fuse holder)
- T 3f – Connector 3 pin, blue, behind dash panel
- T 4d – Connector 4 pin, black, behind dash panel (testing plug)
- T 6v – Connector 6 pin, blue, behind dash panel, left
- T 10c – Connector 10 pin, green, connector point in auxiliary relay carrier
- T 26a – Connector 26 pin, blue, on dash panel insert
- V 18 – Vacuum pump for automatic cruise control

- (32) – Earth point, behind dash panel, left
- (199) – Earth connection – 3 –, in dash panel wiring loom
- (A18) – Connection (54), in dash panel wiring loom
- (A20) – Connection (15a), in dash panel wiring loom
- (A27) – Connection (speed signal), in dash panel wiring loom
- (A32) – Positive connection (30), in dash panel wiring loom
- * – only on vehicles with manual gearbox
- ** – only on vehicles with automatic gearbox
- *** – only on vehicles from 110 kW upwards