


Battery, starter, alternator

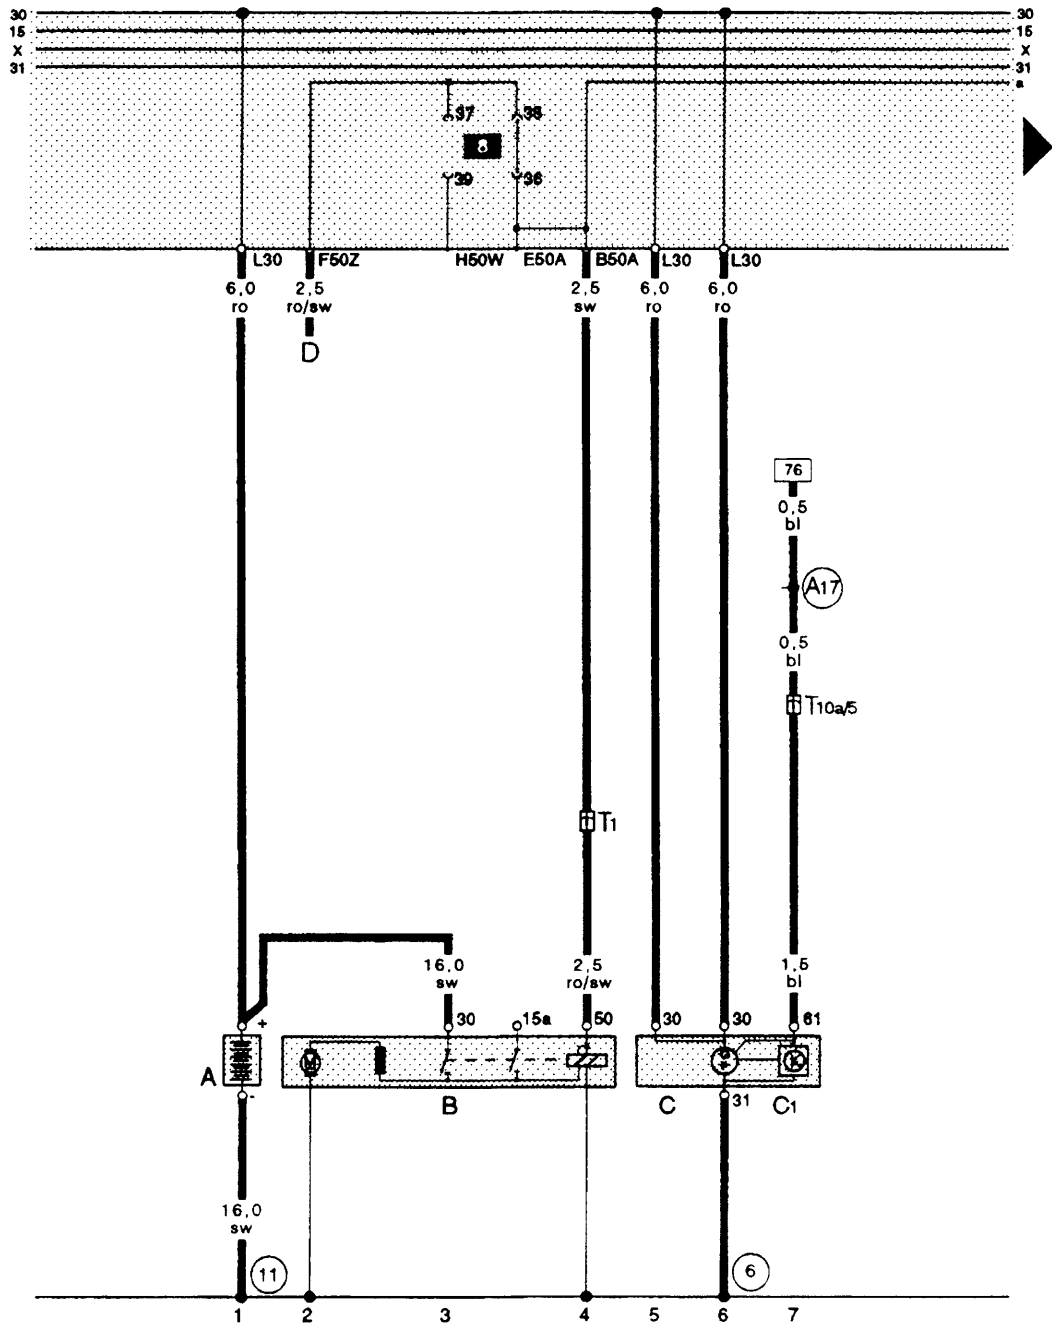

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- A – Battery
- B – Starter
- C – Alternator
- C 1 – Voltage regulator
- D – Ignition/starter switch
- T 1 – Connector single, on bulkhead, right
- T 10a – Connector 10 pin, yellow, connector point in aux. relay carrier
- Ⓞ6 – Earthing strap, engine – alternator
- Ⓞ11 – Earth point, in battery box
- ⓄA17 – Connection (61), in dash panel wiring loom

97-15208