


Electronic fuel injection, fuel pump, injectors

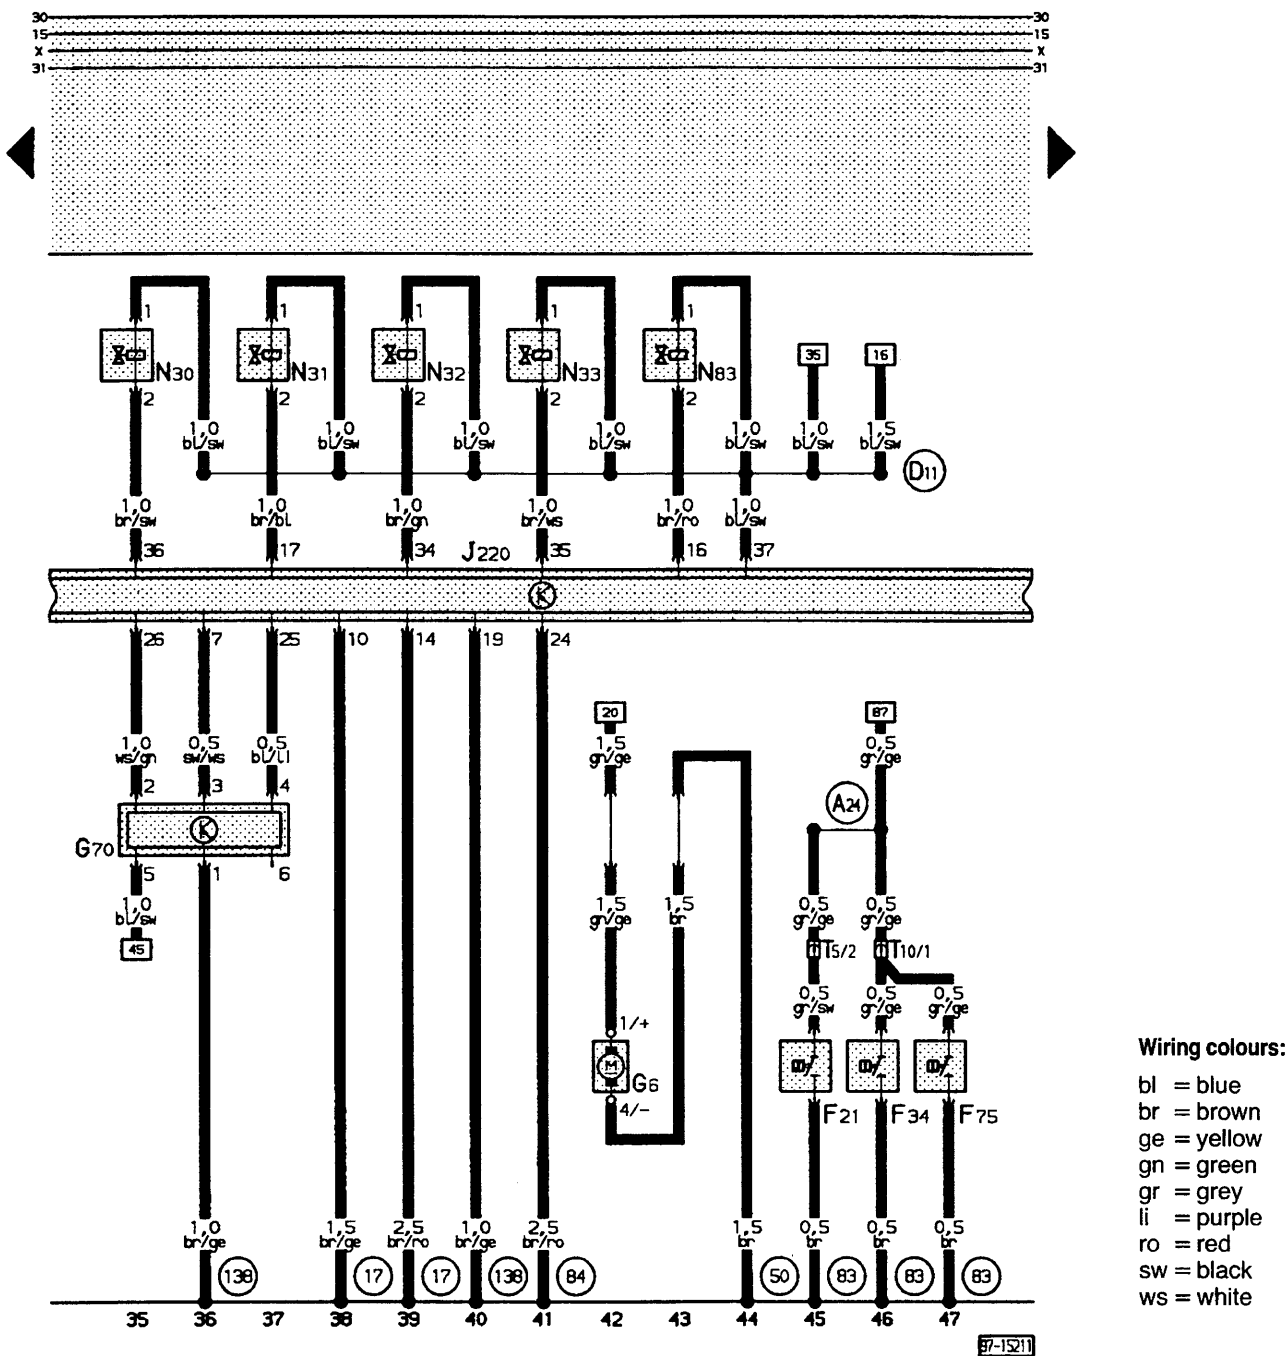

- F 21 – Hydraulic servo unit warning switch
- F 34 – Brake fluid level warning contact
- F 75 – Hydraulic fluid warning contact
- G 6 – Fuel pump (lift pump)
- G 70 – Air mass meter
- J 220 – Control unit for Motronic
- N 30 – Injector, cylinder 1
- N 31 – Injector, cylinder 2
- N 32 – Injector, cylinder 3
- N 33 – Injector, cylinder 4
- N 83 – Injector, cylinder 5
- T 5 – Connector 5 pin, black, connector point in auxiliary relay carrier
- T 10 – Connector 10 pin, black, connector point in auxiliary relay carrier
- ①7 – Earth point, on intake manifold
- ⑤0 – Earth point, luggage boot, left

- ⑧3 – Earth connection – 1 –, in front right wiring loom
- ⑧4 – Earth connection, engine block, in front right wiring loom
- ⑬6 – Earth connection (control unit), in Motronic wiring loom
- Ⓐ24 – Connection (brake system monitoring), in dash panel wiring loom
- Ⓣ11 – Positive (+) connection (15) via fuse 28, in front right wiring loom