


Radiator fan

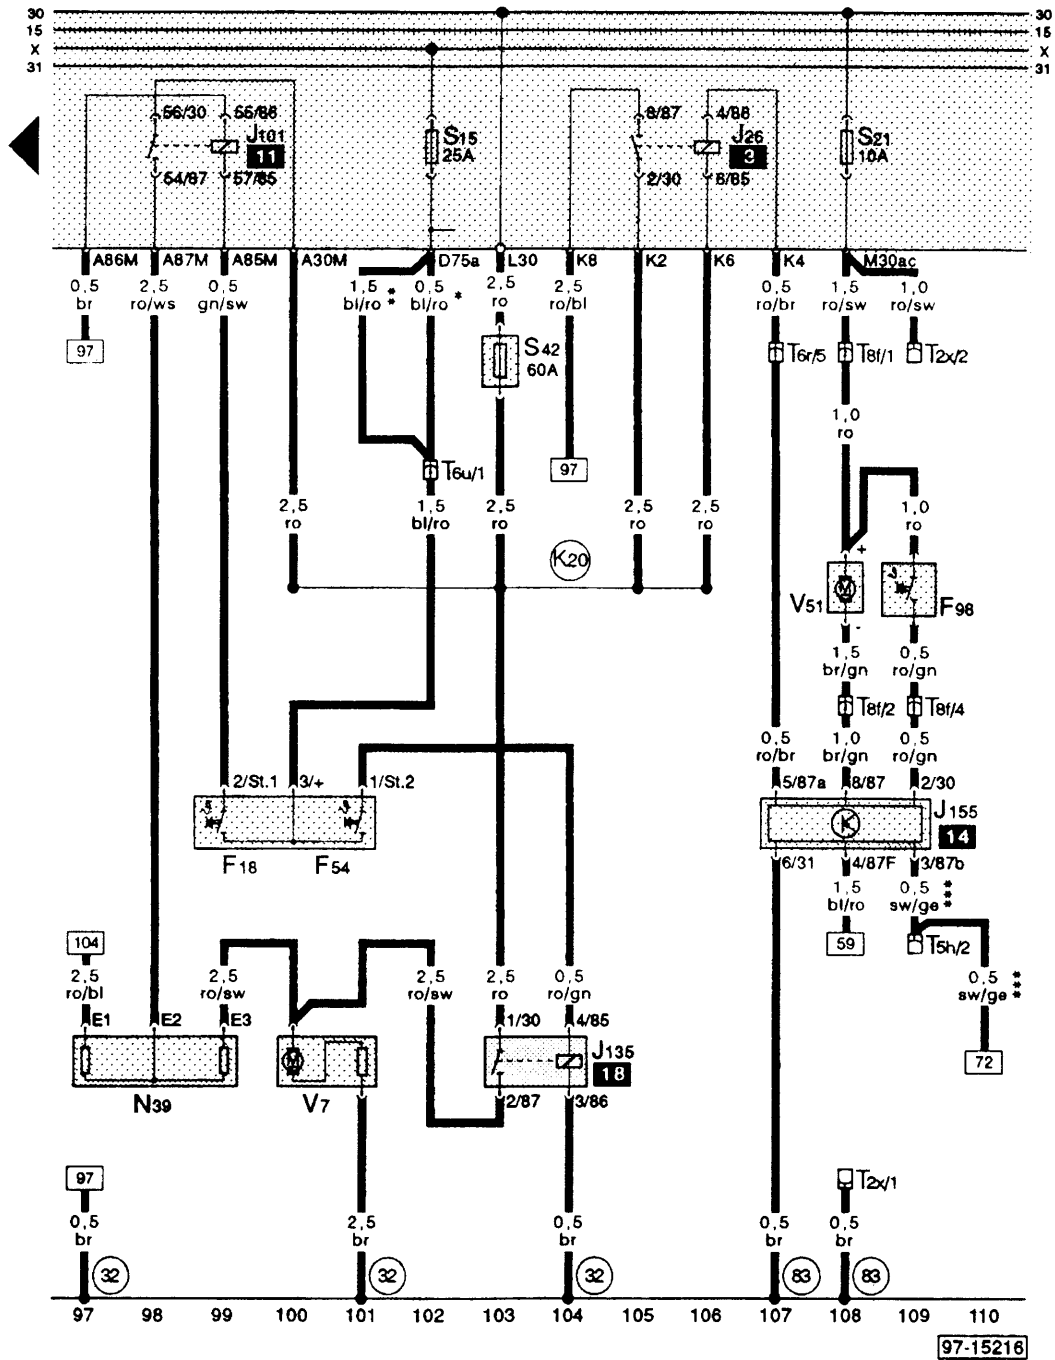

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- F 18 – Radiator fan thermo switch
- F 54 – Radiator fan thermo switch
- F 98 – Thermoswitch for coolant pump/turbocharger
- J 26 – Radiator fan relay
- J 101 – Radiator fan 2nd stage relay
- J 135 – Relay for radiator fan 3rd stage
- J 155 – Switch unit for coolant pump/turbocharger
- N 39 – Radiator fan series resistance
- S 42 – Separate fuse for radiator fan
- T 2x – Connector 2 pin, black, in plenum chamber near relay plate (diagnosis plug)
- T 5h – Connector 5 pin, red, behind dash panel, left
- T 6r – Connector 6 pin, black, behind dash panel, left
- T 6u – Connector 6 pin, green, behind dash panel, left
- T 8f – Connector 8 pin, in engine compartment, right
- V 7 – Radiator fan
- V 51 – Pump for coolant run-on

- ⊙ – Earth point, behind dash panel, left
- ⊗ – Earth connection – 1 –, in front right wiring loom
- ⊕ – Positive (+) connection (30), in radiator fan wiring loom
- \* – up to 7/93
- \*\* – from 7/93
- \*\*\* – from 10/93