


Airbag

from October 1992


Position of relays
see also "Fitting Locations"

Relay plate with fuse holder:

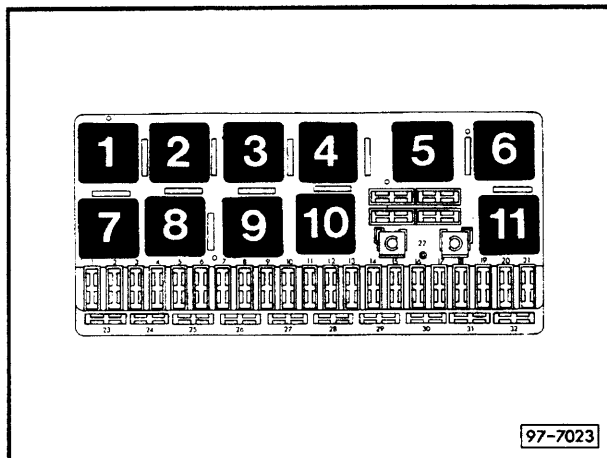

Relay positions:

Auxiliary relay carrier, front
(under dash panel, left)

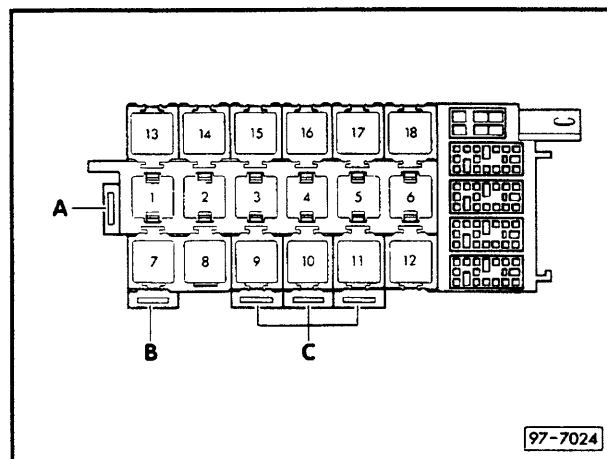


Relay positions:

9 – Relay for airbag warning lamp

Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear
(under seat bench, left)

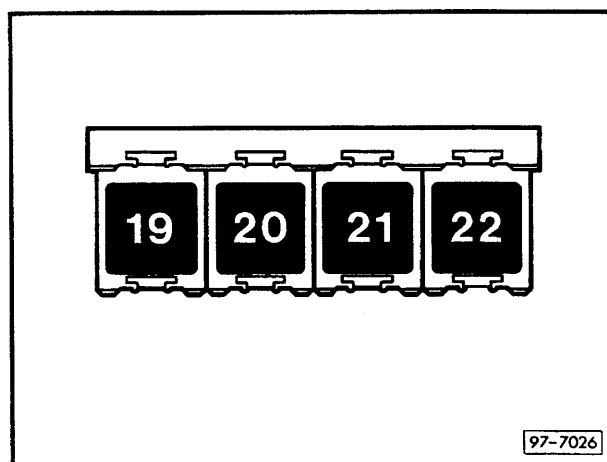

Relay positions:

