


Heated rear window (vehicles with air conditioner)

from July 1992


Position of relays –
see also “Fitting Locations”

Relay plate with fuse holder:

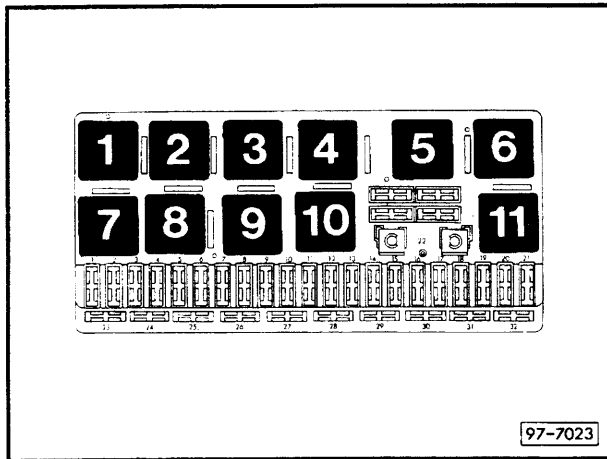

Relay positions:

Auxiliary relay carrier, front
(below dash panel, left)

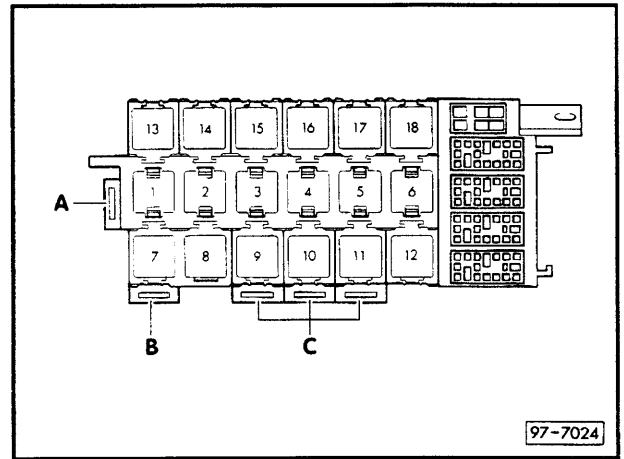


Relay positions:

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear
(under rear seat, left)

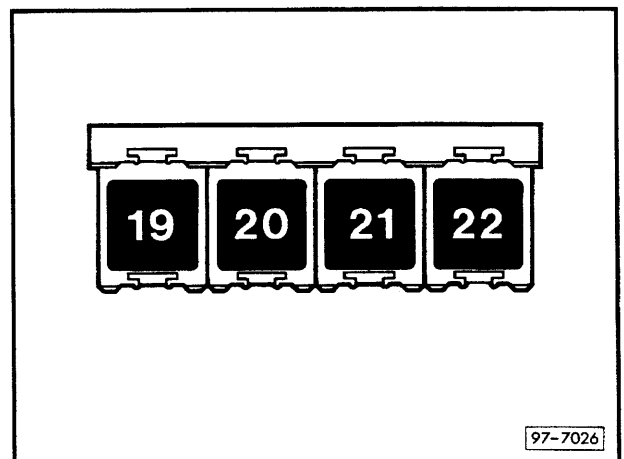

Relay positions:

Heated rear window (vehicles with air conditioner)

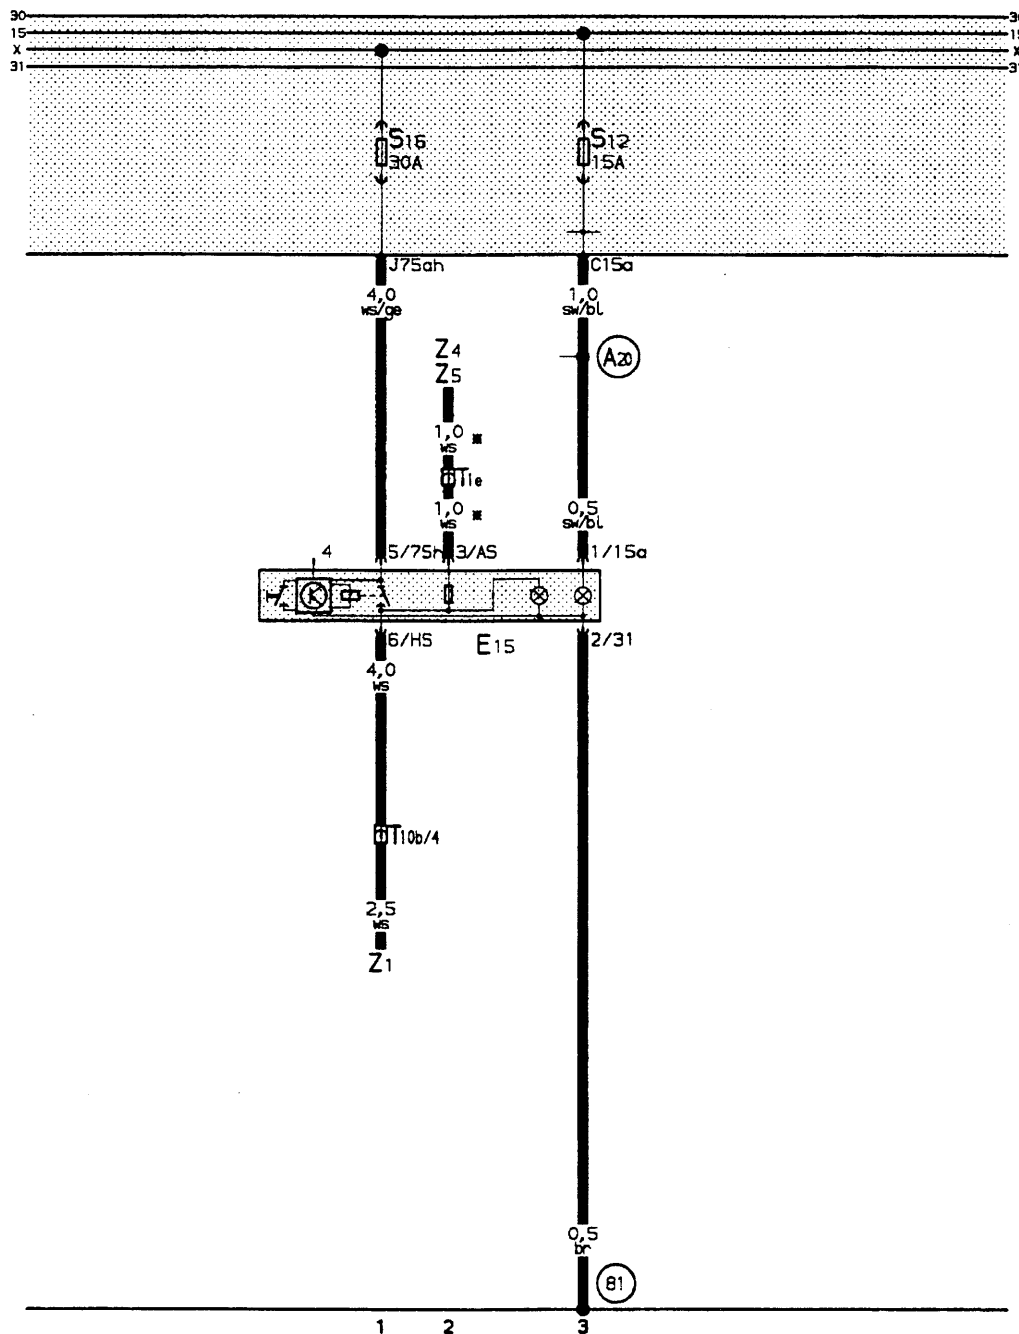

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 15 – Heated rear window switch
- T 1e – Connector single, green, behind dash panel, left
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- Z 1 – Heated rear window
- Z 4 – Heated outer mirror (driver's side)
- Z 5 – Heated outer mirror (passenger side)
- ⊕1 – Earth connection – 1 –, in dash panel wiring loom
- ⊕20 – Connection (15a), in dash panel wiring loom
- * – only with electrically adjusted and heated outer mirrors

Note: See Current flow diagram No. 50/19 for illustration of heated rear window (vehicles without air conditioner).

97-15357