


Electrically adjustable and heated outer mirrors

from July 1992


Position of relays – see also “Fitting Locations”

Relay plate with fuse holder:

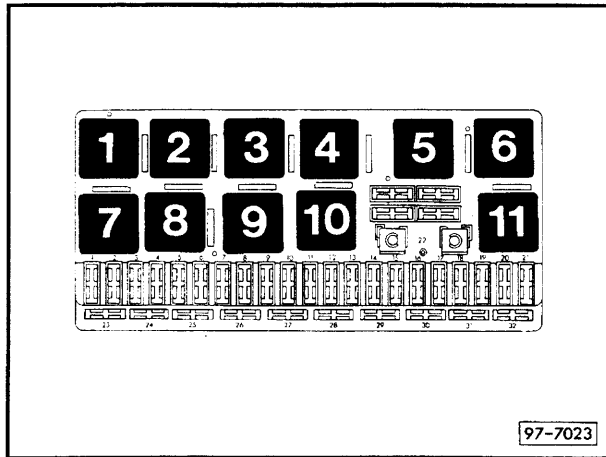

Position of relays:

Auxiliary relay carrier, front (under dash panel, left)

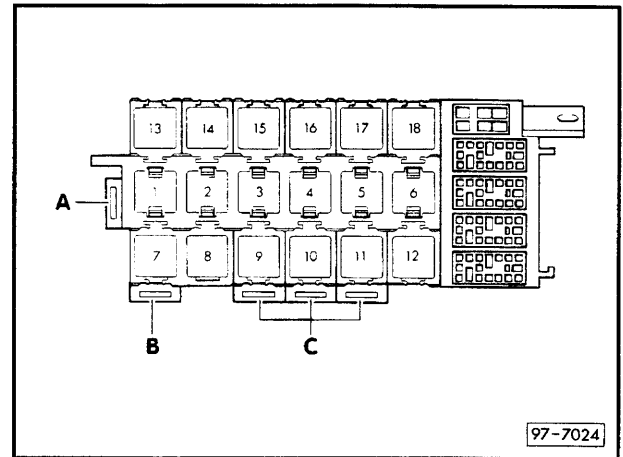


Position of relays:

Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Auxiliary relay carrier, rear (under rear seat bench, left)

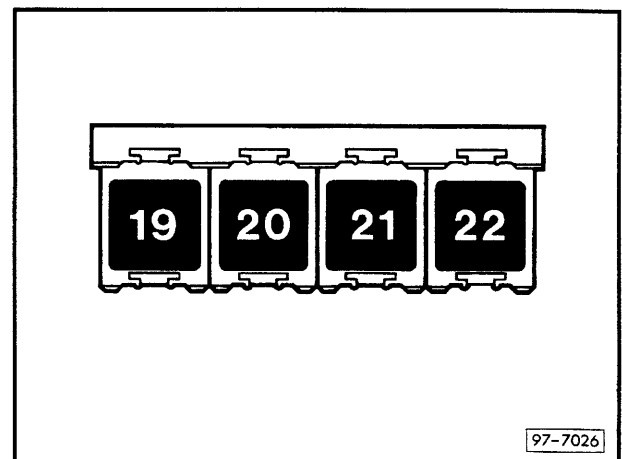

Position of relays:

Electrically adjusted and heated outer mirrors

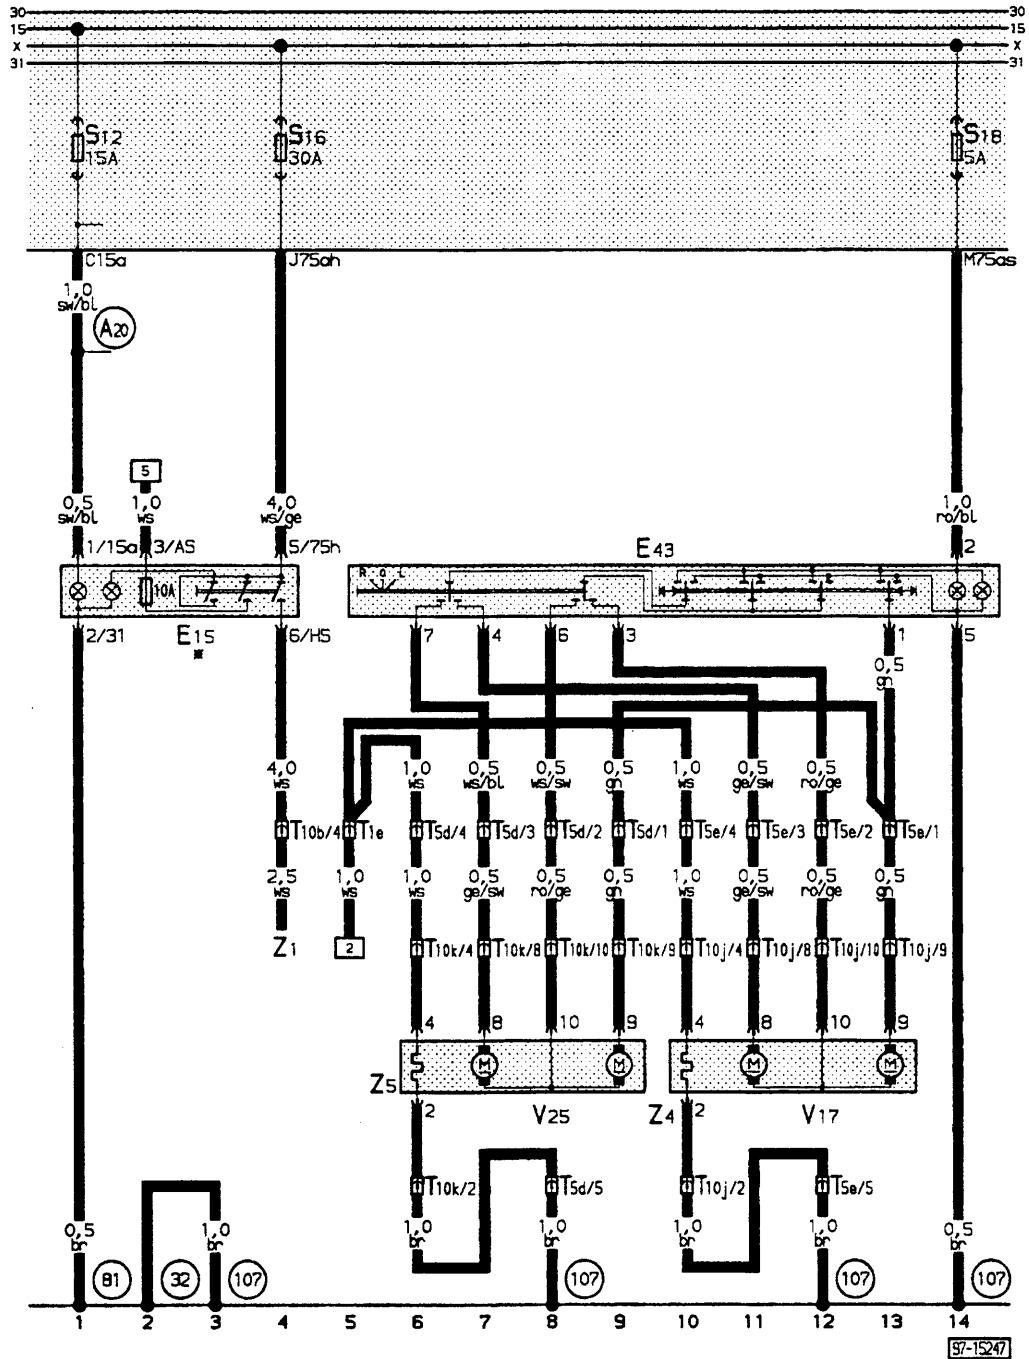

Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 15 – Heated rear window switch
- E 43 – Mirror adjustment switch
- T 1e – Connector single, green, behind dash panel, left
- T 5d – Connector 5 pin, on A-pillar, lower right
- T 5e – Connector 5 pin, on A-pillar, lower left
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- T 10j – Connector 10 pin, on driver's mirror
- T 10k – Connector 10 pin, on passenger's mirror
- V 17 – Mirror adjustment motor (driver's side)
- V 25 – Mirror adjustment motor (passenger side)
- Z 1 – Heated rear window
- Z 4 – Heated outer mirror (driver's side)
- Z 5 – Heated outer mirror (passenger side)
- Ⓢ – Earth point, behind dash panel, left
- Ⓢ – Earth connection – 1 –, in dash panel wiring loom
- Ⓢ – Earth connection in external mirror wiring loom
- (A20) – Connection (15a), in dash panel wiring loom
- * – Switch only on vehicles without air conditioner
- See CFD No. 89 for switch on vehicles with air conditioner