


Dash panel insert, voltage stabiliser, coolant monitor, fuel gauge, speedometer

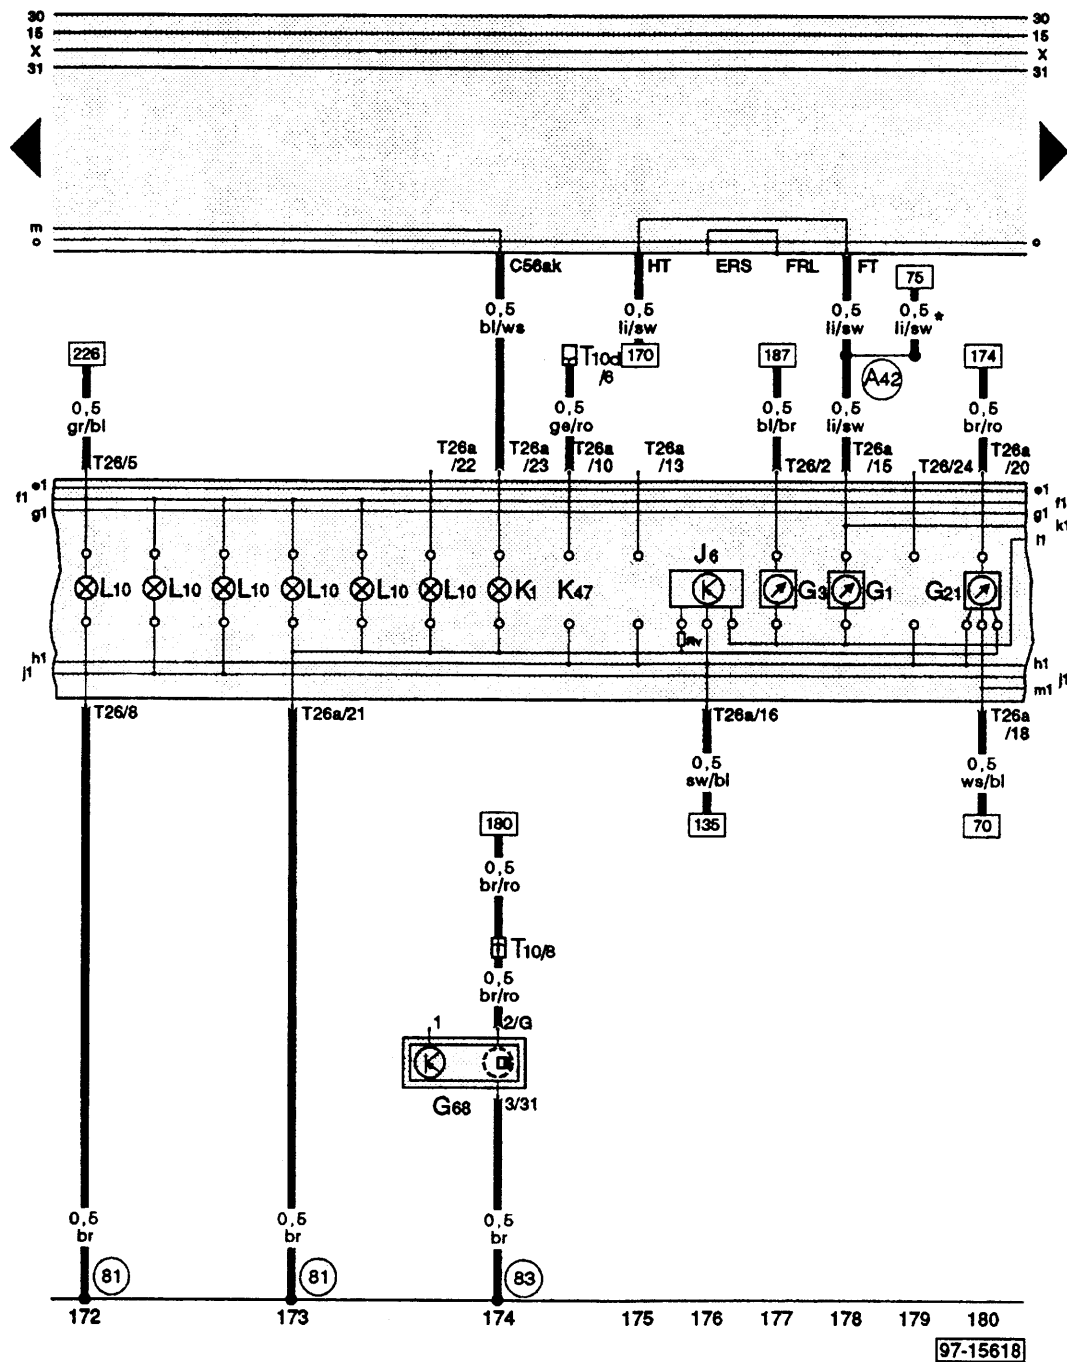

- G 1 – Fuel gauge
- G 3 – Coolant temperature gauge
- G 21 – Speedometer
- G 68 – Road speed sender
- J 6 – Voltage stabilizer
- K 1 – Main beam warning lamp
- K 47 – ABS warning lamp
- L 10 – Dash panel insert light bulb
- T 10 – Connector 10 pin, black, connector point in aux. relay carrier
- T 10d – Connector 10 pin, blue, connector point in aux. relay carrier
- T 26 – Connector 26 pin, yellow, on dash panel insert
- T 26a – Connector 26 pin, blue, on dash panel insert
- Ⓢ1 – Earth connection – 1 –, in dash panel wiring loom
- Ⓢ3 – Earth connection – 1 –, in front right wiring loom
- Ⓢ42 – Connection (fuel gauge), in dash panel wiring loom
- * – only on vehicles with 4-wheel drive