


Headlights, side lights, engine compartment light, luggage boot light, number plate light, glove box light

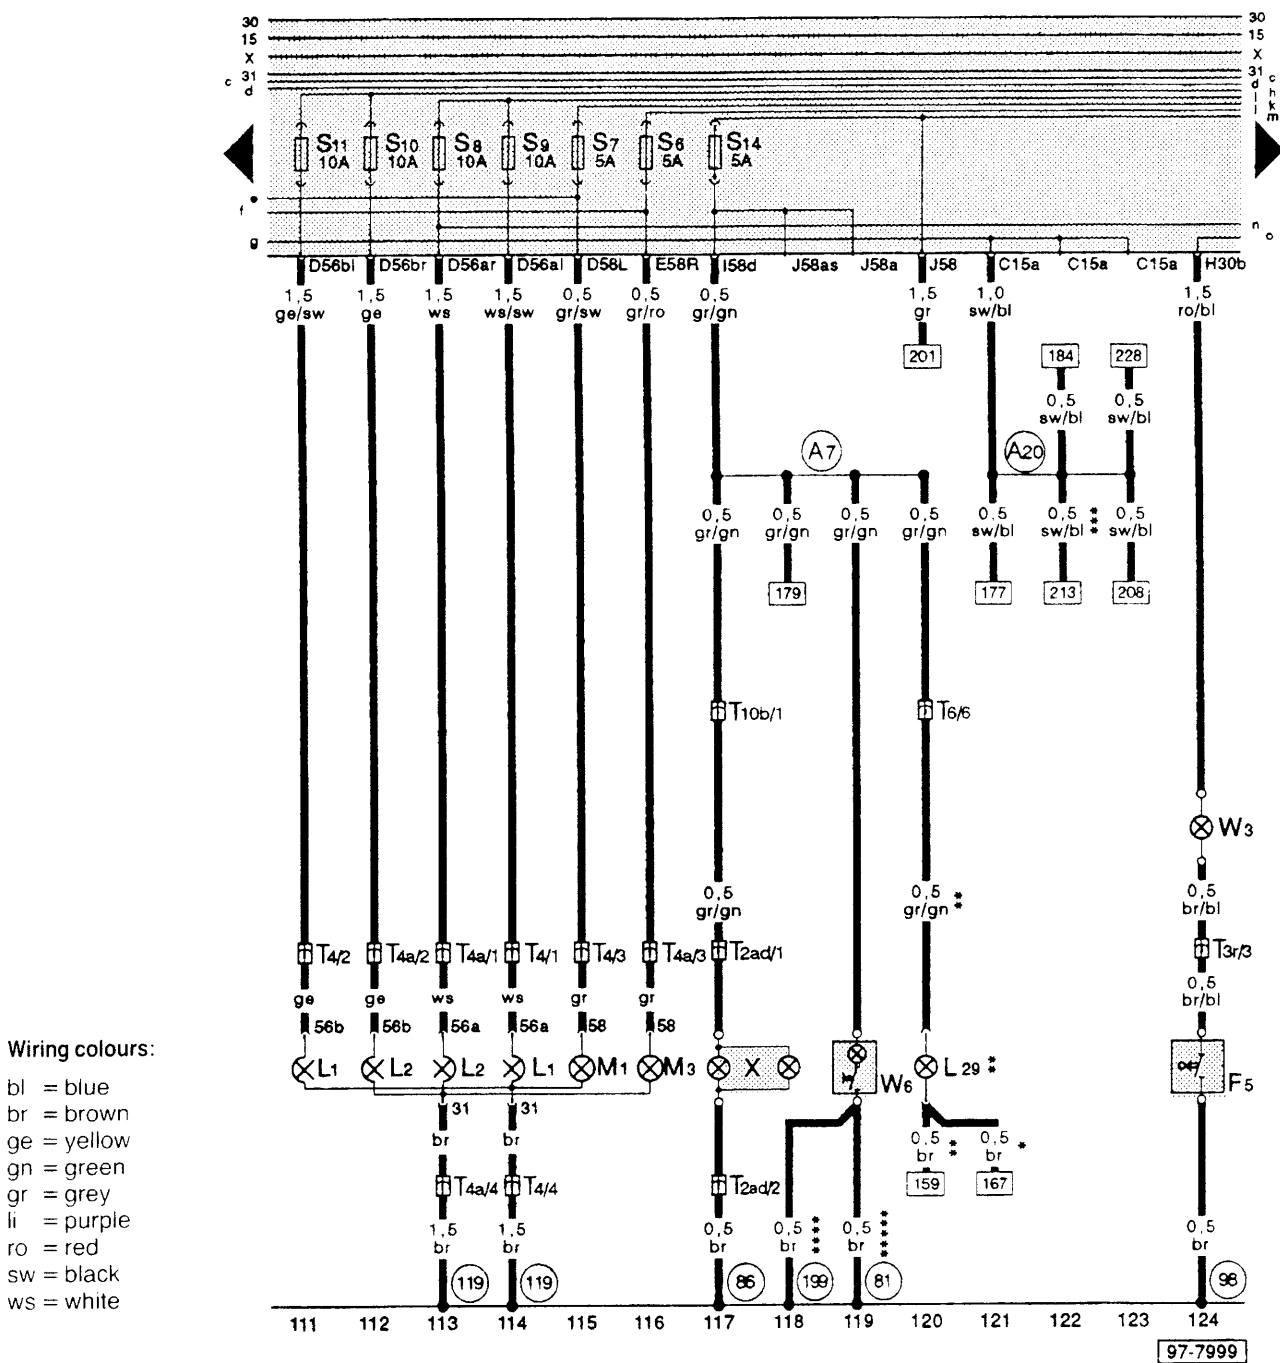

- | | | | |
|-------|--|-------|---|
| F 5 | – Luggage boot light switch | (81) | – Earth connection – 1 –, in dash panel wiring loom |
| L 1 | – Twin filament bulb, left headlight | (86) | – Earth connection – 1 –, in rear wiring loom |
| L 2 | – Twin filament bulb, right headlight | (98) | – Earth connection, in tailgate wiring loom |
| L 29 | – Engine compartment light bulb | (119) | – Earth connection – 1 –, in headlight wiring loom |
| M 1 | – Side light bulb, left | (194) | – Earth connection – 3 –, in dash panel wiring loom |
| M 3 | – Side light bulb, right | (A7) | – Positive (+) connection (58 D1), in dash panel wiring loom |
| T 2ad | – Connector 2 pin, on rear cross panel | (A21) | – Connection (15a), in dash panel wiring loom |
| T 3r | – Connector 3 pin, white, in luggage boot, left | * | – Only with heated washer jets/headlight washer system, up until 7/93 |
| T 4 | – Connector 4 pin, near headlight, left | ** | – Only with engine compartment light, up until 7/93 |
| T 4a | – Connector 4 pin, near headlight, right | *** | – With front fog lights |
| T 6 | – Connector 6 pin, black, connector point in aux. relay carrier | **** | – As from 7/93 |
| T 10b | – Connector 10 pin, brown, connector point in aux. relay carrier | ***** | – Up until 7/93 |
| W 3 | – Luggage boot light | | |
| W 6 | – Glove box light | | |
| X | – Number plate light | | |