


Dash panel insert, speedometer, coolant monitor, voltage stabilizer

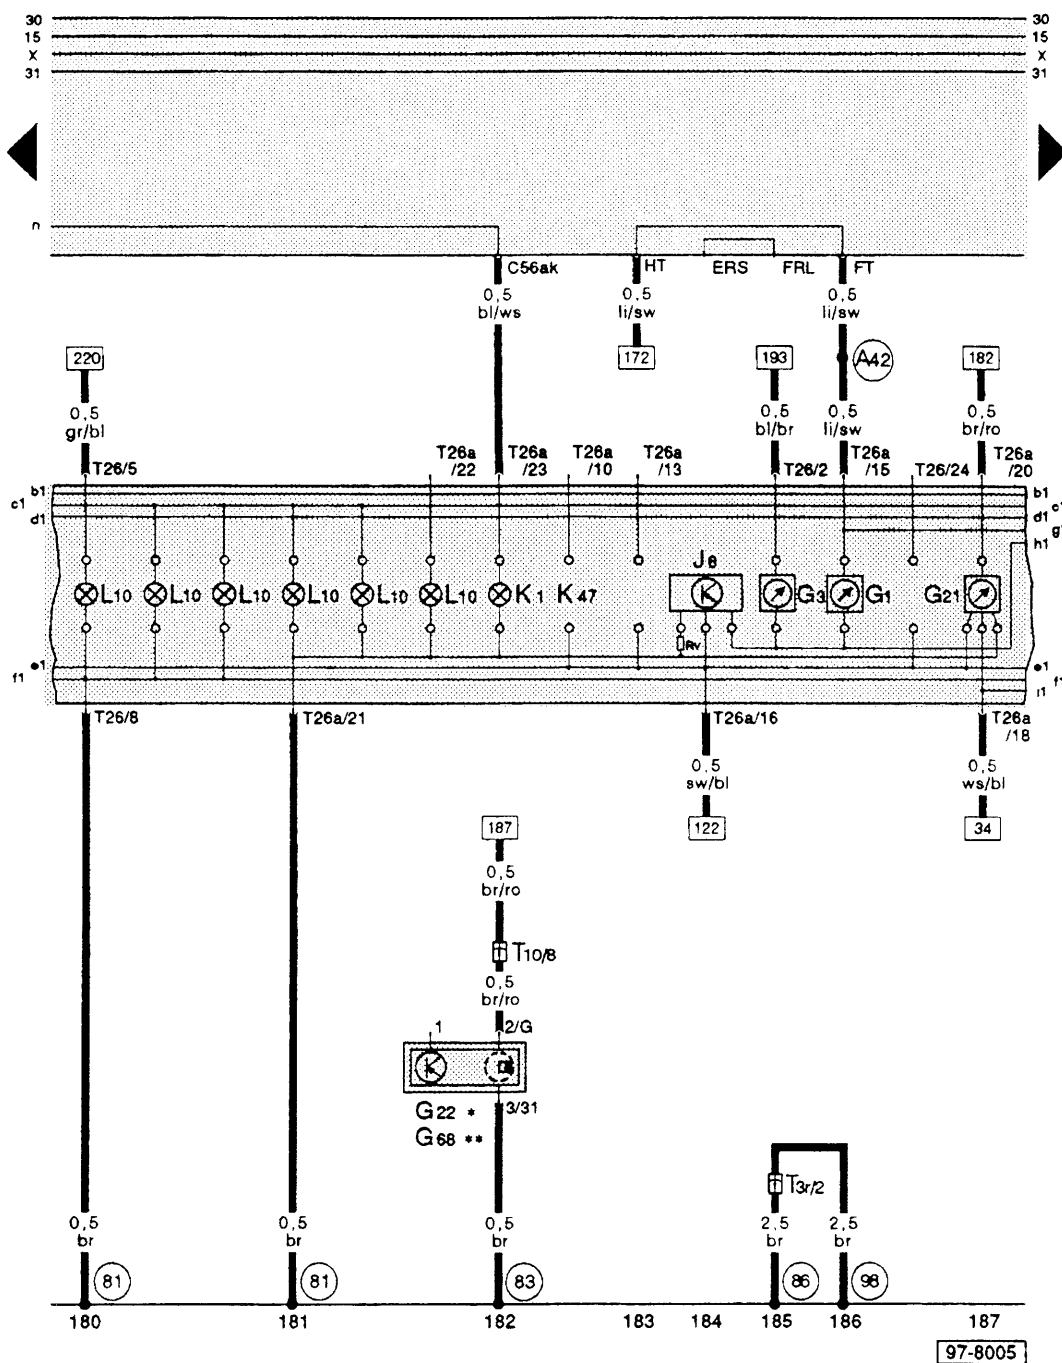

- G 1 – Fuel gauge
- G 3 – Coolant temperature gauge
- G 21 – Speedometer
- G 22 – Speedometer sender (Hall sender, on gearbox)
- G 68 – Road speed sender (inductive sender, 2 connections)
- J 6 – Voltage stabilizer
- K 1 – Main beam warning lamp
- K 47 – ABS warning lamp
- L 10 – Dash panel insert light bulb
- T 3r – Connector 3 pin, white, in luggage boot, left
- T 10 – Connector 10 pin, black, connection point in aux. relay carrier
- T 26 – Connector 26 pin, yellow, on dash panel insert
- T 26a – Connector 26 pin, blue, on dash panel insert
- ⑧1 – Earth connection – 1 –, in dash panel wiring loom
- ⑧3 – Earth connection – 1 –, in front right wiring loom

- ⑧6 – Earth connection – 1 –, in rear wiring loom
- ⑧8 – Earth connection, in tailgate wiring loom
- A42 – Connection (fuel gauge), in dash panel wiring loom
- * – Up until 7/93
- ** – As from 7/93