


Dash panel insert, mini-check system, oil pressure warning lamp, coolant monitor, handbrake warning system

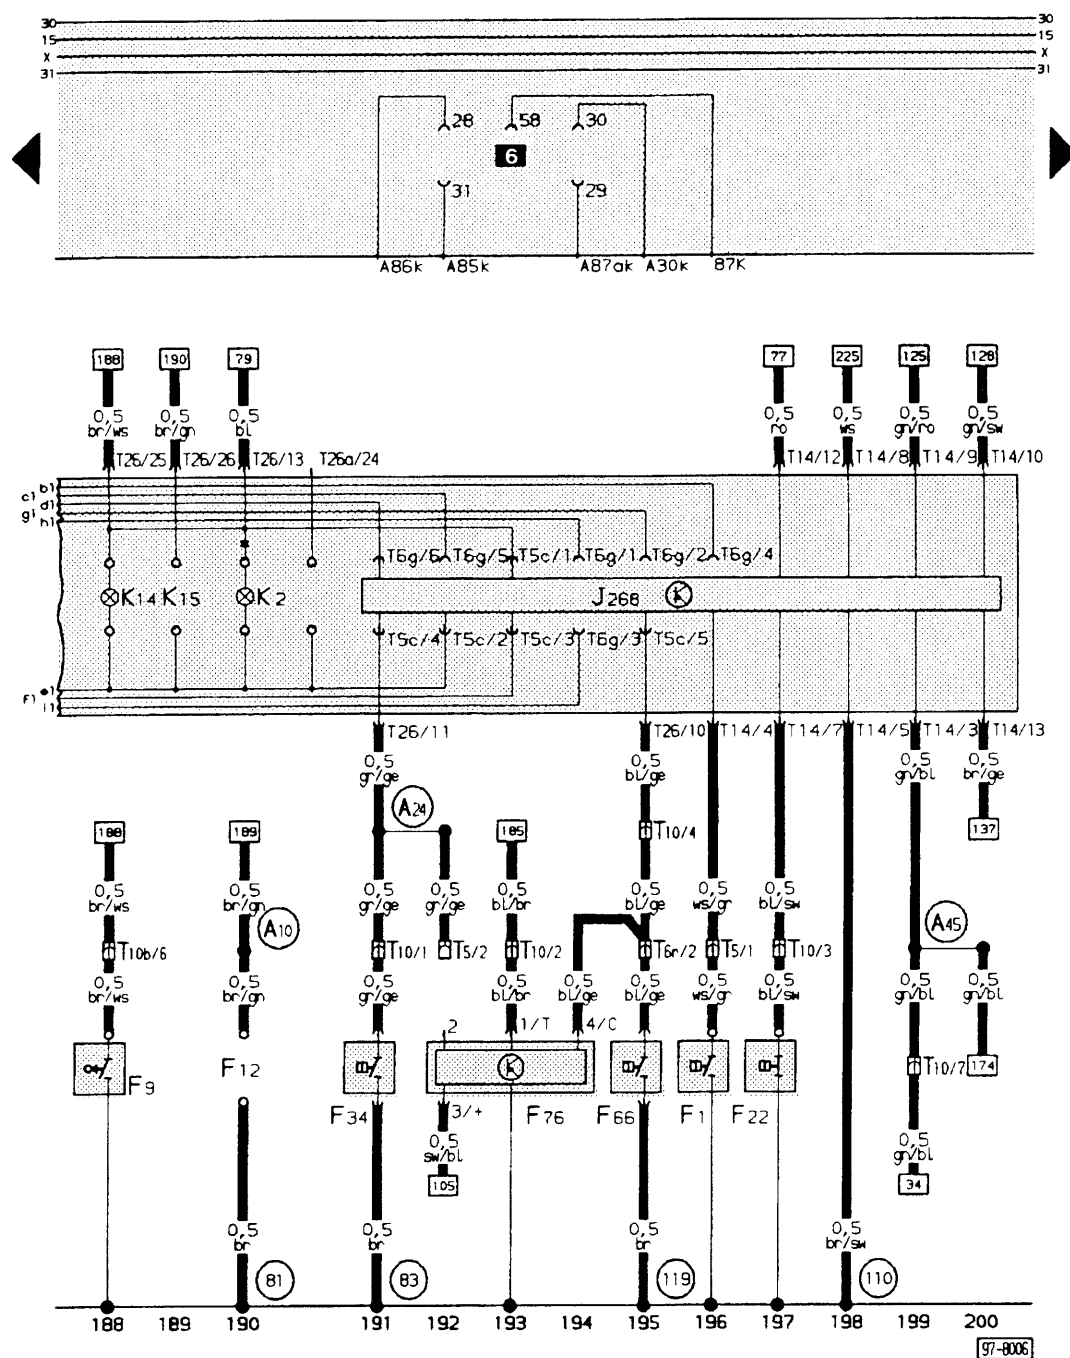

- F 1 – Oil pressure switch (1.8 bar)
 F 9 – Handbrake warning system switch
 F 12 – Cold start warning system contact
 F 22 – Oil pressure switch (0.3 bar)
 F 34 – Brake fluid level warning contact
 F 66 – Coolant shortage indicator switch
 F 76 – Electronic thermoswitch
 J 268 – Control unit for mini-check system
 K 2 – Alternator warning lamp
 K 14 – Handbrake warning lamp
 K 15 – Starting device warning lamp
 T 5 – Connector 5 pin, black, connection point in aux. relay carrier
 T 5c – Connector 5 pin, on dash panel insert
 T 6g – Connector 6 pin, on dash panel insert
 T 6r – Connector 6 pin, black, behind dash panel, left
 T 10 – Connector 10 pin, black, connector point in aux. relay carrier
 T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
 T 14 – Connector 14 pin, white, on dash panel insert (mini-check system)

- T 26 – Connector 26 pin, yellow, on dash panel insert
 T 26a – Connector 26 pin, blue, on dash panel insert
 (81) – Earth connection – 1 –, in dash panel wiring loom
 (83) – Earth connection – 1 –, in front right wiring loom
 (110) – Earth connection – 2 –, in dash panel wiring loom
 (119) – Earth connection – 1 –, in headlight wiring loom
 (A10) – Connection (glow plug control) in dash panel wiring loom
 (A4) – Connection (brake system monitoring), in dash panel wiring loom
 (A4+) – Connection (engine speed signal), in dash panel wiring loom