


Fresh air blower, cigarette lighter

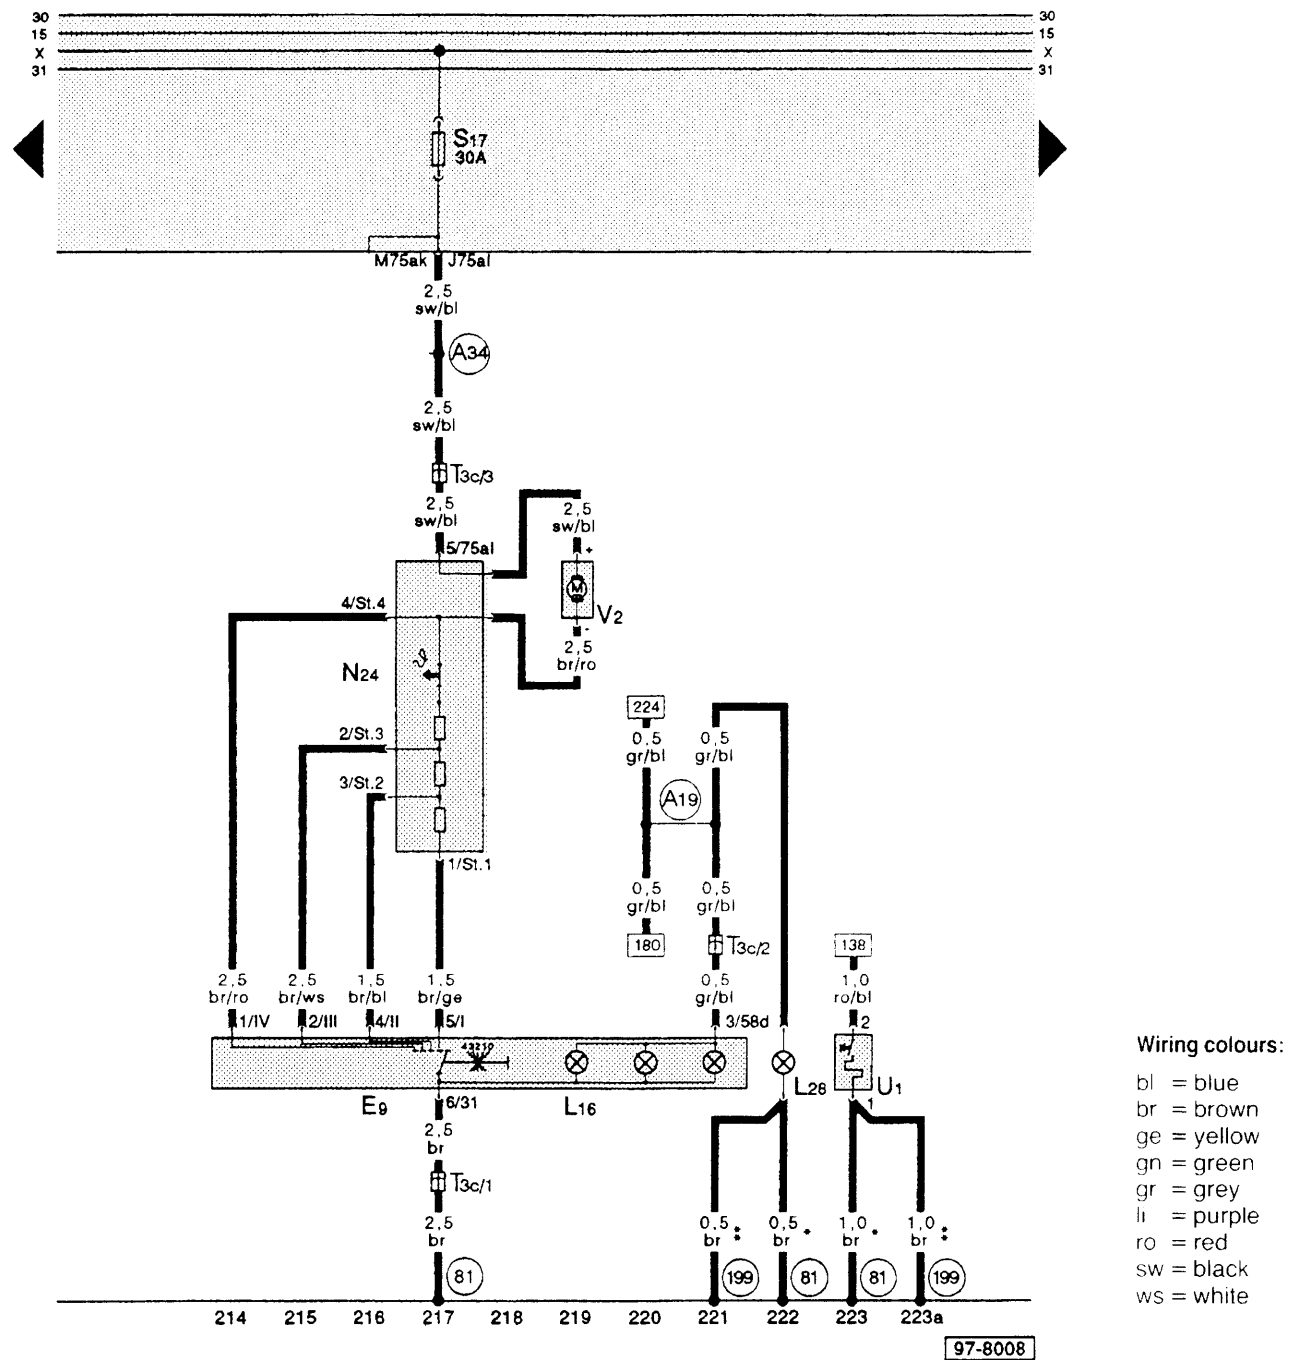

- E 9 – Fresh air blower switch
- L 16 – Fresh air controls light bulb
- L 28 – Cigarette lighter light bulb
- N 24 – Series resistance for fresh air blower with overheating fuse
- T 3c – Connector 3 pin, brown, behind dash panel, centre
- U 1 – Cigarette lighter
- V 2 – Fresh air blower
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (199) – Earth connection – 3 –, in dash panel wiring loom
- (A19) – Connection (58d), in dash panel wiring loom
- (A34) – Connection (75 x), in dash panel wiring loom
- * – Up until 7/93
- ** – As from 7/93