


Daylight driving lights with foglights and rear foglight (Norway/Sweden), Audi Coupé

from Juli 1992

Position of relays,
see also "Fitting Locations"


Relay plate with fuse holder

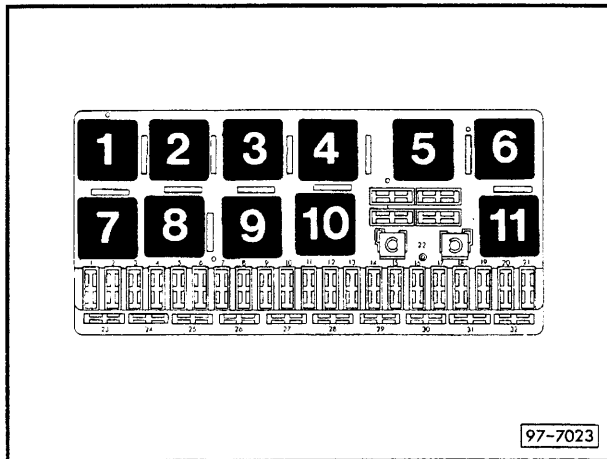

Position of relays:

- 1** – Foglight relay
- 5** – Relief relay for X-contact


Auxiliary relay carrier, front
(under dash panel, left)

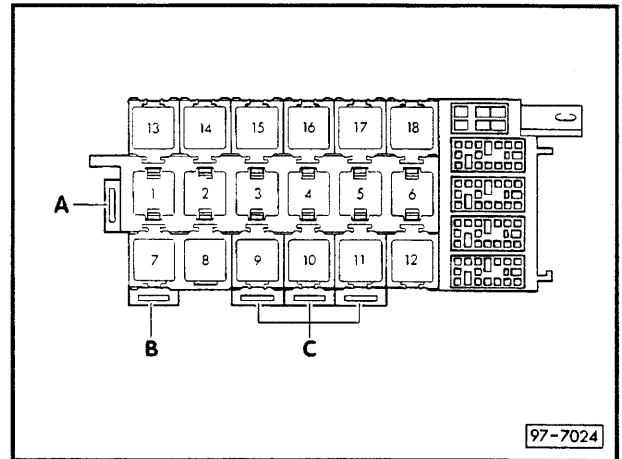

Position of relays:

- 10** – Control unit for daylight driving lights

Auxiliary relay carrier, rear
(under rear seat bench, left)

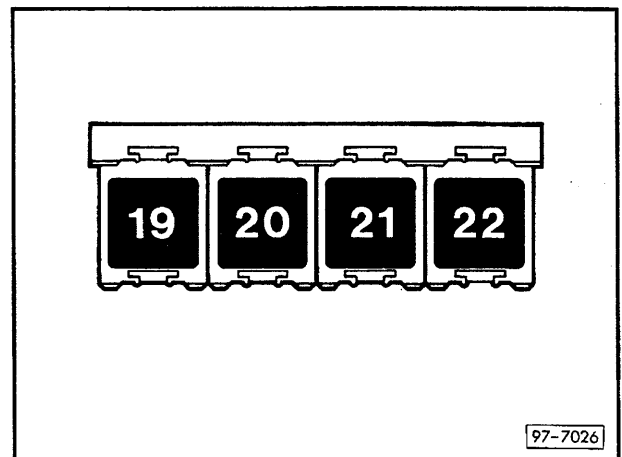


Fuse colours


- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – beige

Position of relays:

Daylight driving lights with foglights and rear foglight (Norway/Sweden)

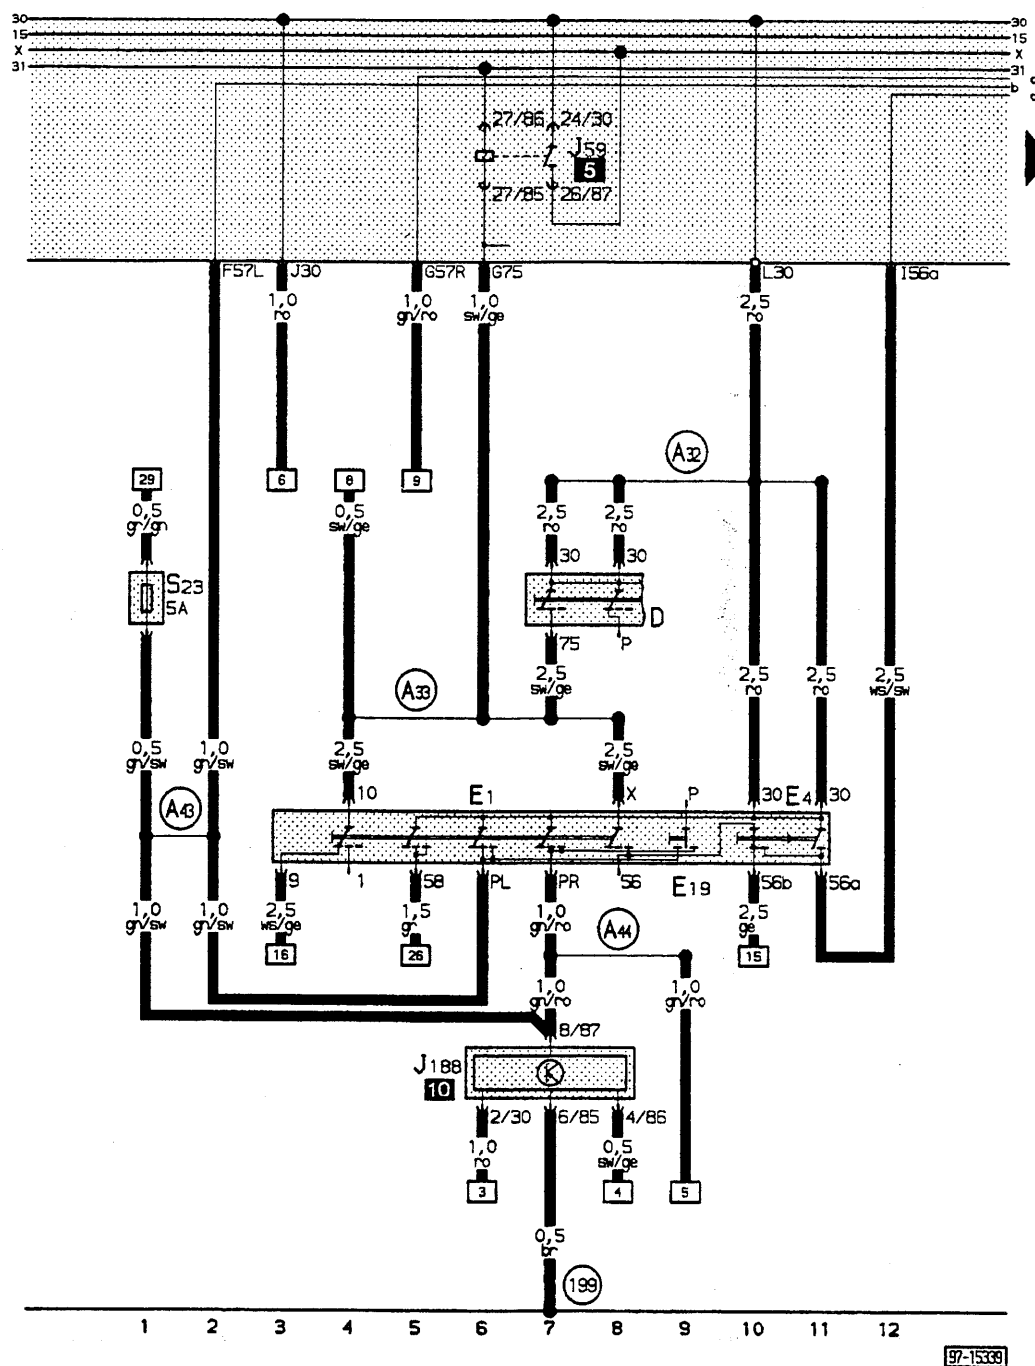

Daylight driving lights with foglights and rear foglight (Norway/Sweden)

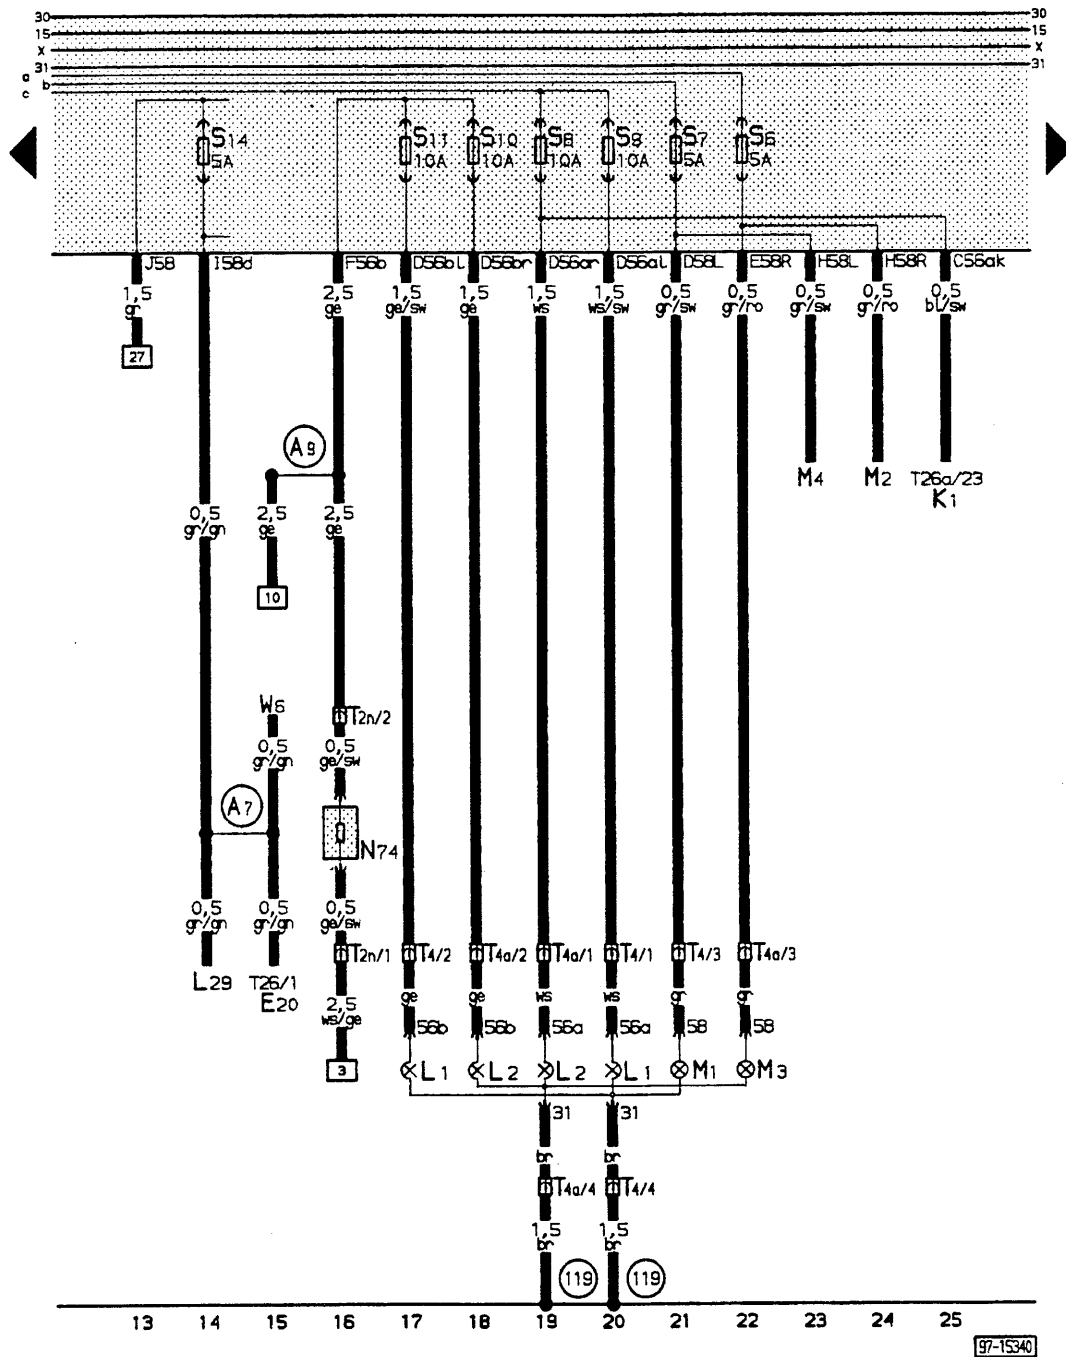

Wiring colours:

bl = blue
 br = brown
 ge = yellow
 gn = green
 gr = grey
 li = purple
 ro = red
 sw = black
 ws = white

- E 20 – Switches and instruments – lighting control
 K 1 – Main beam warning lamp
 L 1 – Twin filament bulb, left headlight
 L 2 – Twin filament bulb, right headlight
 L 29 – Engine compartment light bulb
 M 1 – Side light bulb, left
 M 2 – Tail light bulb, right
 M 3 – Side light bulb, right
 M 4 – Tail light bulb, left
 N 74 – Resistance wire
 T 2n – Connector 2 pin, brown, behind dash panel, left
 T 4 – Connector 4 pin, near headlight, left
 T 4a – Connector 4 pin, near headlight, right
 T 26 – Connector 26 pin, yellow, on dash panel insert
 T 26a – Connector 26 pin, blue, on dash panel insert
 W 6 – Glove box light

- (119) – Earth connection – 1 –, in headlight wiring loom
 (A7) – Positive (+) connection (58 D1), in dash panel wiring loom
 (A9) – Positive (+) connection (56 b), in dash panel wiring loom

Daylight driving lights with foglights and rear foglight (Norway/Sweden)

