


Towing bracket with auto-check system, Audi Avant

from July 1992


Position of relays – also see “Fitting Locations“

Relay plate with fuse holder:

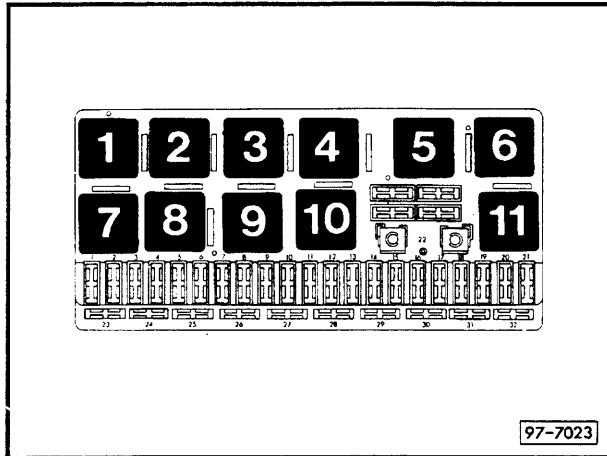

Relay positions:


Auxiliary relay carrier, front (below dash panel, left)

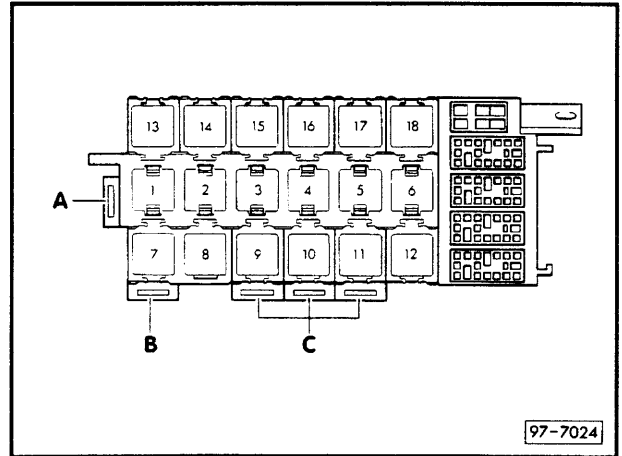

Relay positions:

15 – Bulb monitoring device, front

Auxiliary relay carrier, rear (under rear seat, left)

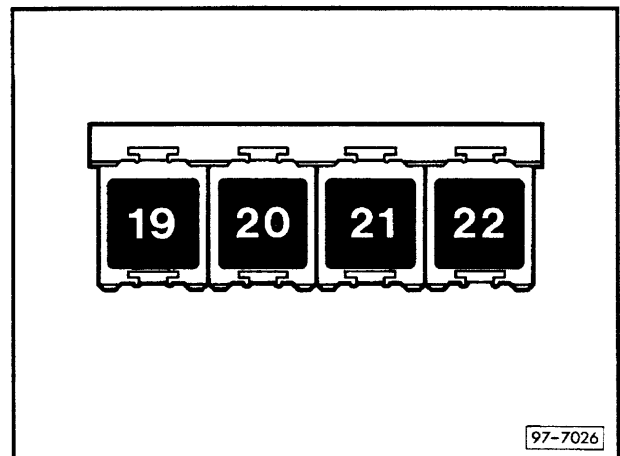


Relay positions:

19 – Rear fog light cut-out relay (trailer towing)

Fuse colours

- 30 A – green
- 25 A – colourless (white)
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 5 A – light brown

Towing bracket with auto-check system

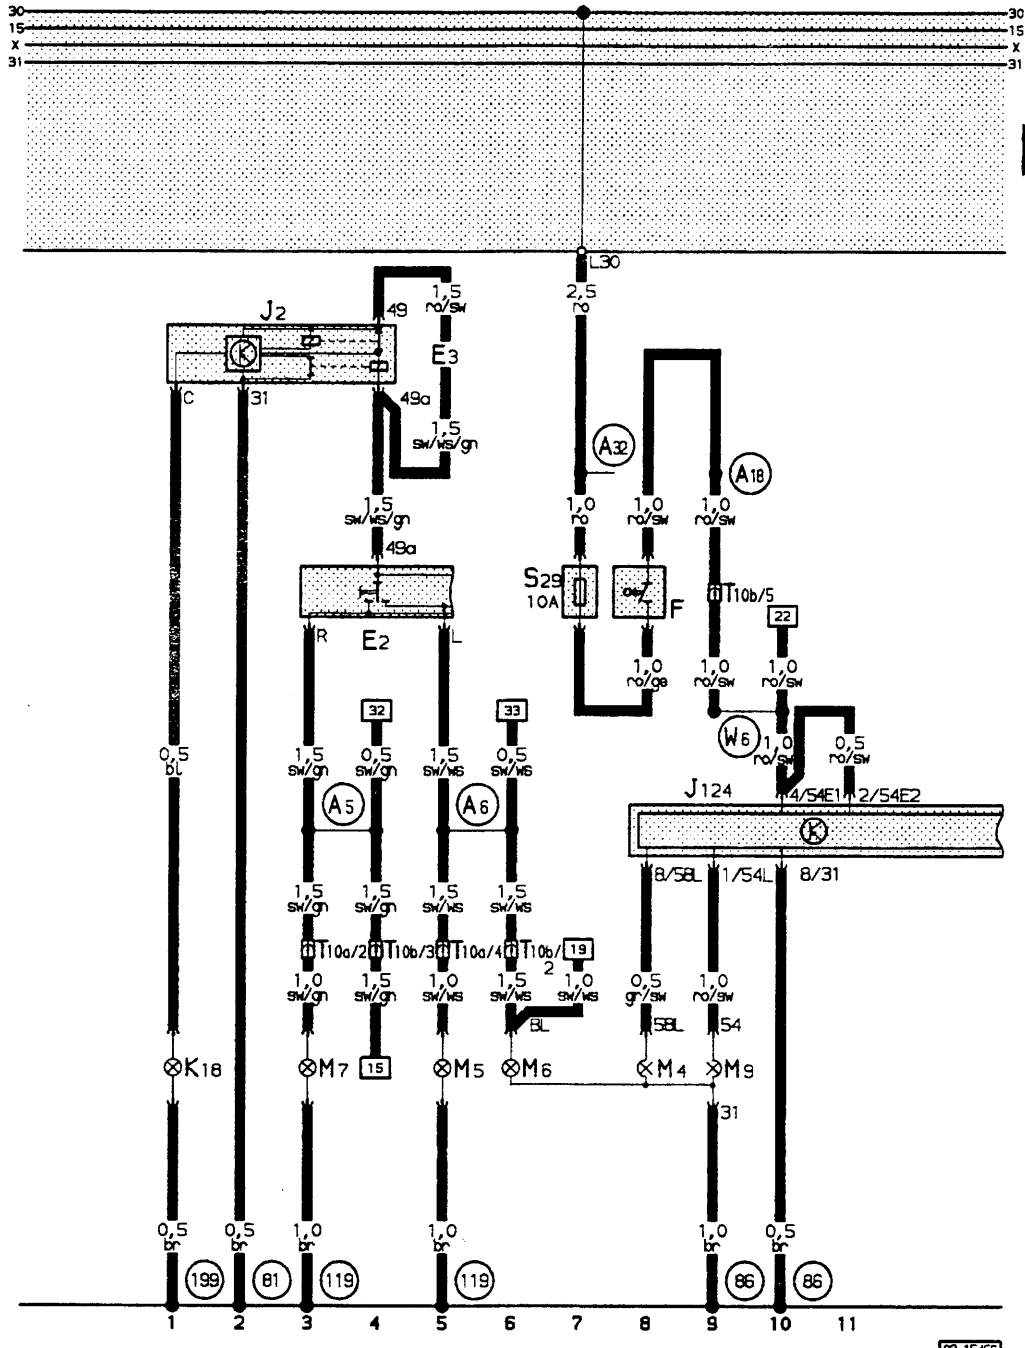


Wiring colours:

- bl = blue
- br = brown
- ge = yellow
- gn = green
- gr = grey
- li = purple
- ro = red
- sw = black
- ws = white

- E 2 – Turn signal switch
- E 3 – Emergency light switch
- F – Brake light switch
- J 2 – Emergency light relay
- J 124 – Bulb monitoring device, rear
- K 18 – Trailer operation warning lamp
- M 4 – Tail light bulb, left
- M 5 – Front left turn signal bulb
- M 6 – Rear left turn signal bulb
- M 7 – Front right turn signal bulb
- M 9 – Brake light bulb, left
- S 29 – Fuse for brake lights (in additional fuse holder)
- T 10a – Connector 10 pin, yellow, connector point in aux. relay carrier
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- (81) – Earth connection – 1 –, in dash panel wiring loom
- (86) – Earth connection – 1 –, in rear wiring loom
- (119) – Earth connection – 1 –, in headlight wiring loom
- (199) – Earth connection – 3 –, in dash panel wiring loom
- (A5) – Positive (+) connection (turn signal, right), in dash panel wiring loom
- (A6) – Positive (+) connection (turn signal, left), in dash panel wiring loom
- (A18) – Connection (54), in dash panel wiring loom
- (A32) – Positive connection (30), in dash panel wiring loom
- (W6) – Connection (left turn signal), in rear wiring loom

97-15456


Towing bracket with auto-check system

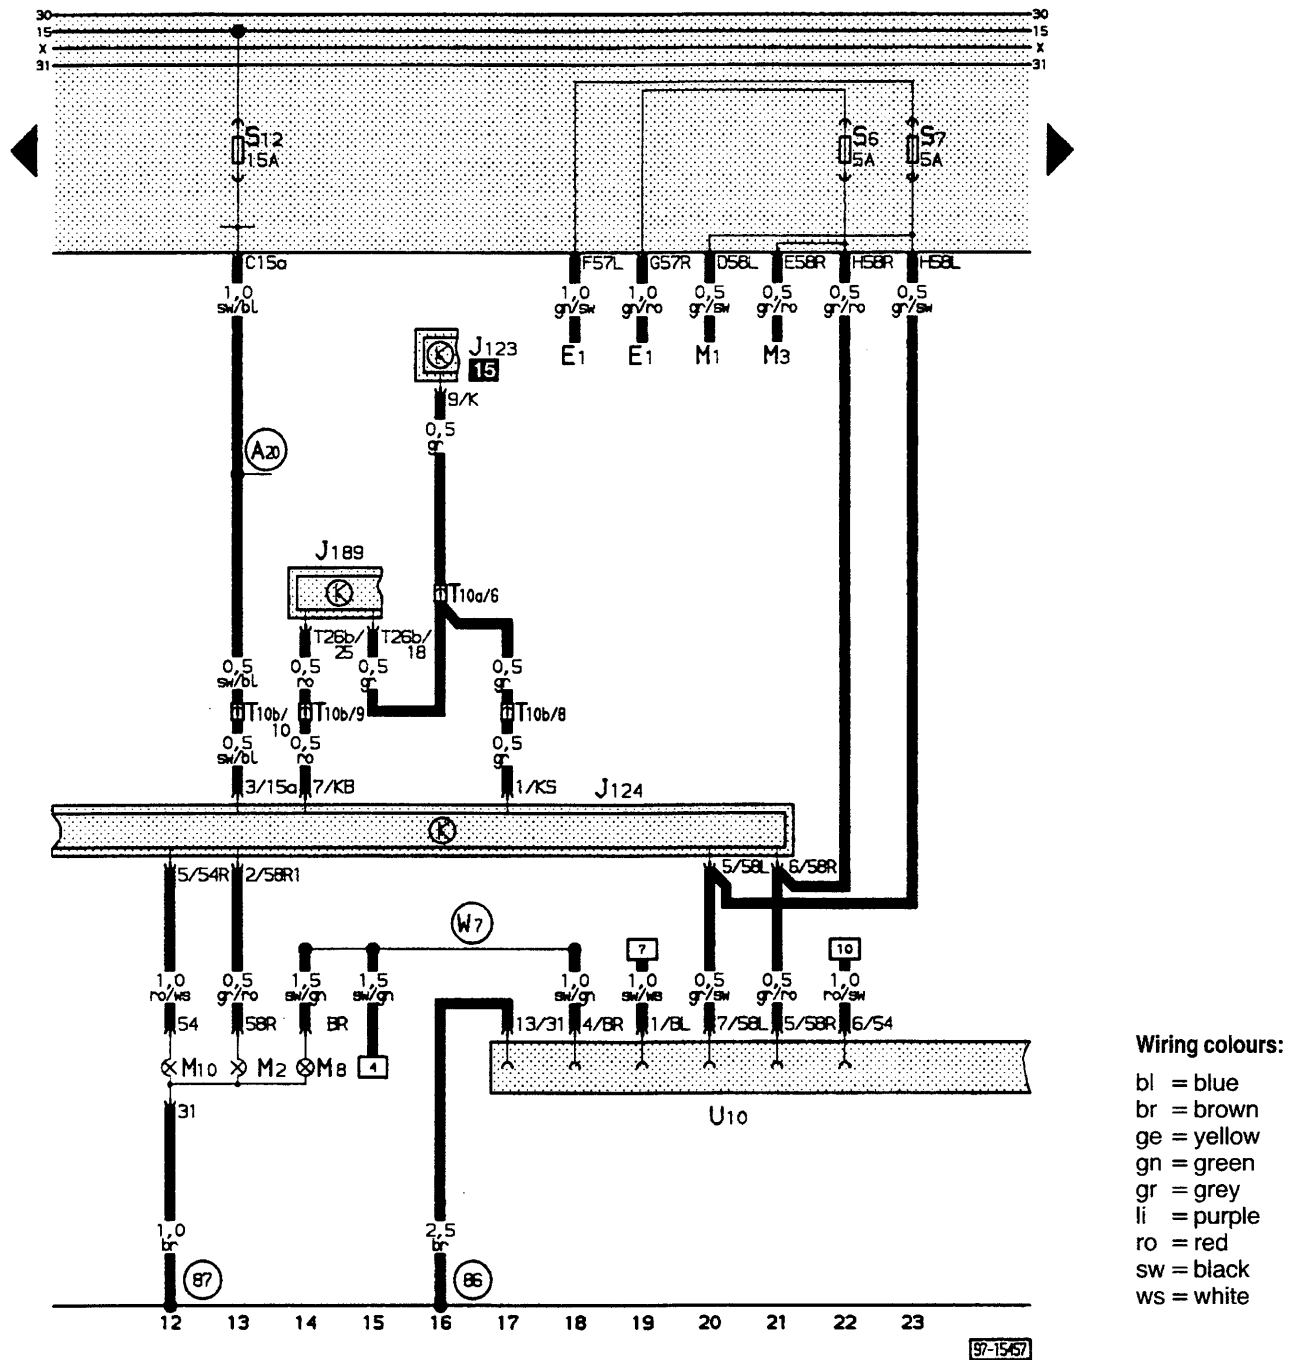

- E 1 – Lighting switch
- J 123 – Bulb monitoring device front
- J 124 – Bulb monitoring device rear
- J 189 – Auto-check system
- M 1 – Side light bulb, left
- M 2 – Tail light bulb, right
- M 3 – Side light bulb, right
- M 8 – Rear right turn signal bulb
- M 10 – Brake light bulb, right
- T 10a – Connector 10 pin, yellow, connector point in aux. relay carrier
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- U 10 – Trailer socket

- Ⓢ6 – Earth connection – 1 –, in rear wiring loom
- Ⓢ7 – Earth connection – 2 –, in rear wiring loom
- Ⓐ20 – Connection (15a), in dash panel wiring loom
- Ⓜ7 – Connection (right turn signal) in rear wiring loom

Towing bracket with auto-check system

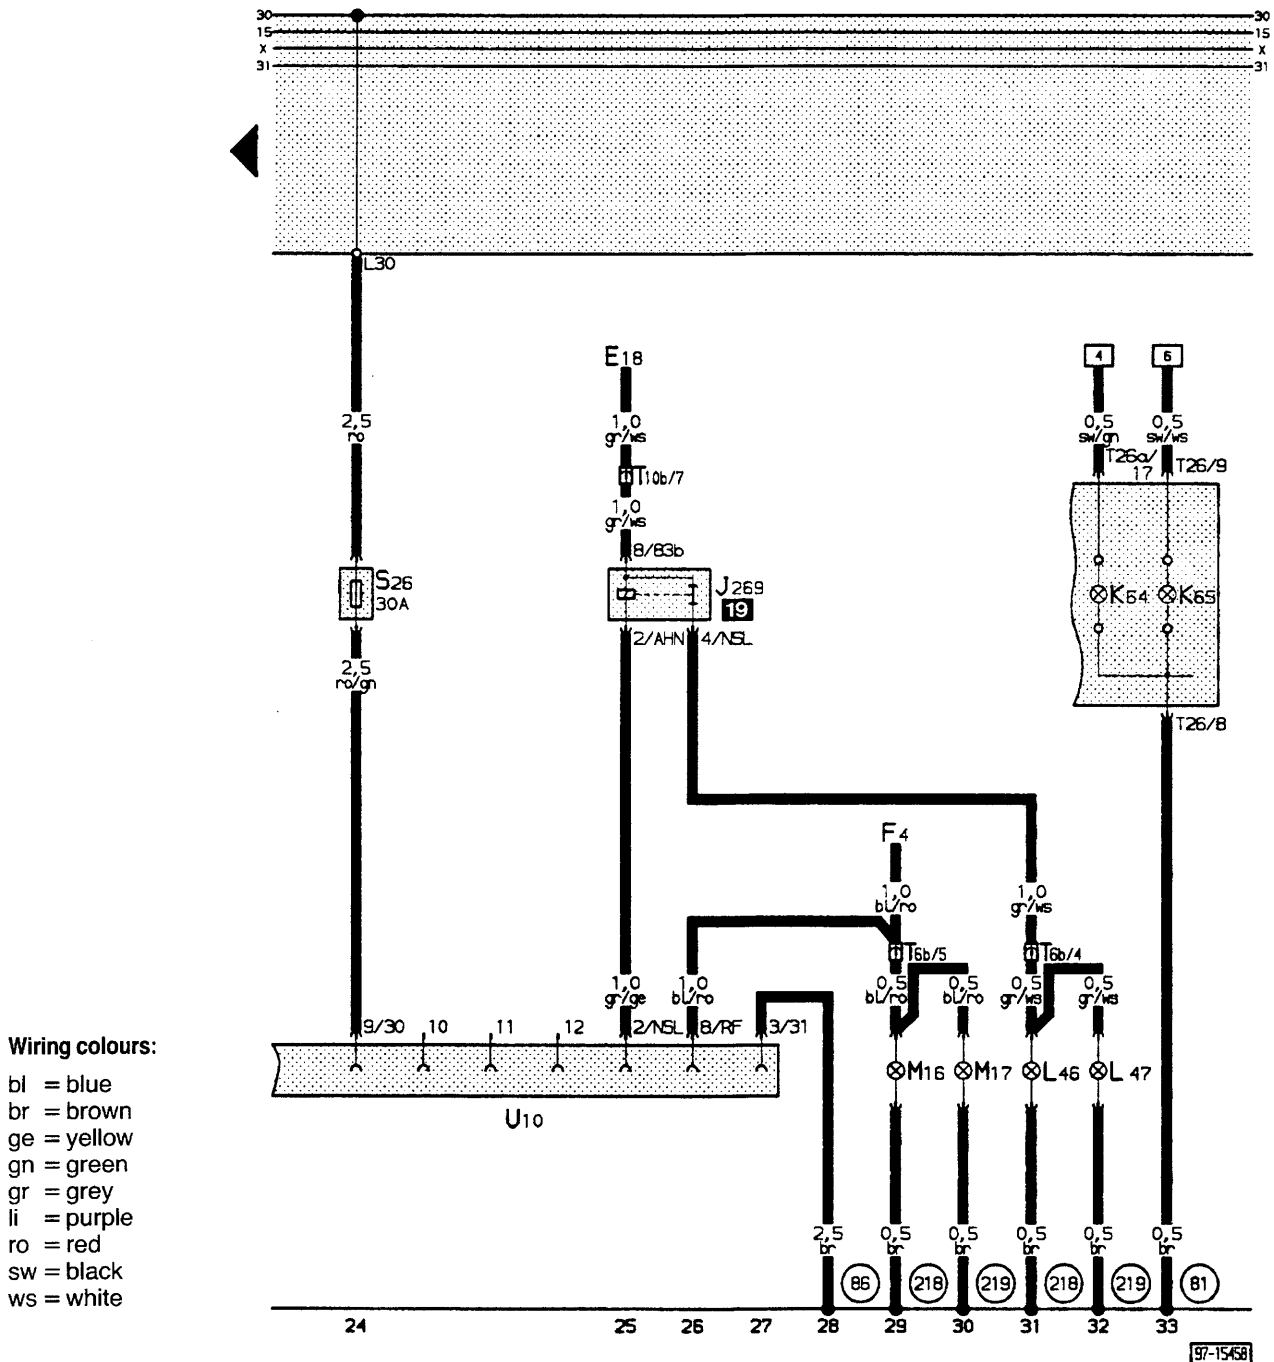

- E 18 – Rear fog light switch
- F 4 – Reversing light switch
- J 269 – Rear fog light cut-out relay (trailer towing)
- K 64 – Emergency light and right turn signal warning lamp
- K 65 – Left turn signal warning lamp
- L 46 – Rear fog light bulb left
- L 47 – Rear fog light bulb right
- M 16 – Reversing light bulb left
- M 17 – Reversing light bulb right
- S 26 – Separate fuse for trailer socket (in additional fuse holder)
- T 6b – Connector 6 pin, black, in luggage boot, left
- T 10b – Connector 10 pin, brown, connector point in aux. relay carrier
- T 26 – Connector 26 pin, yellow, on dash panel insert
- T 26a – Connector 26 pin, blue, on dash panel insert
- U 10 – Trailer socket

- (81) – Earth connection – 1 –, in dash panel wiring loom
- (86) – Earth connection – 1 –, in rear wiring loom
- (218) – Earth connection – 1 –, in tailgate wiring loom
- (219) – Earth connection – 2 –, in tailgate wiring loom