


Additional instruments

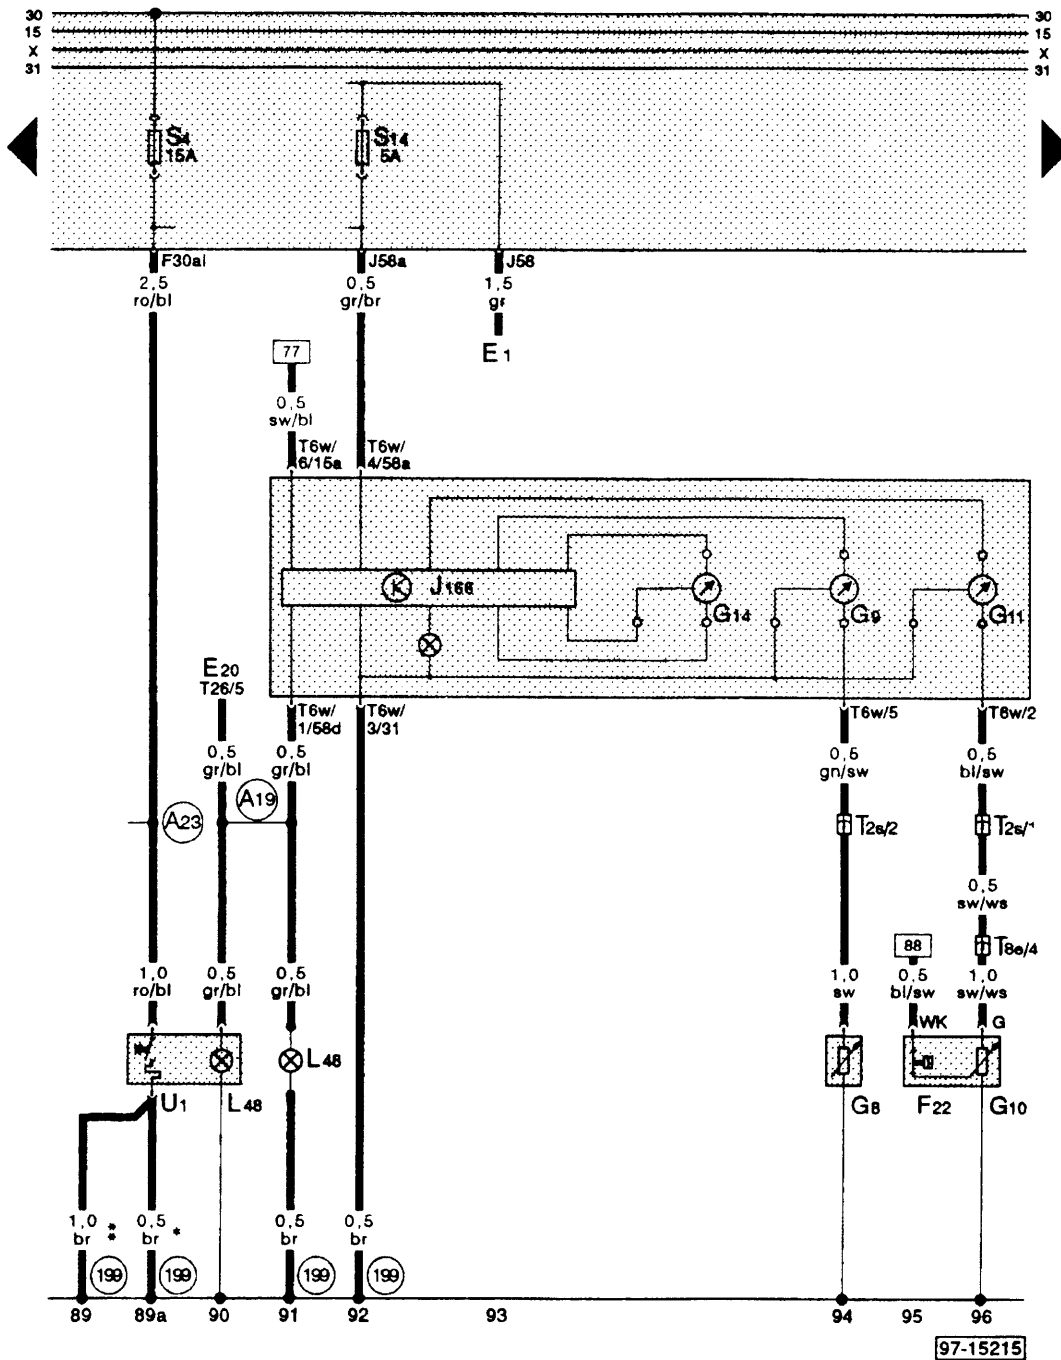

Wiring colours:

bl = blue
br = brown
ge = yellow
gn = green
gr = grey
li = purple
ro = red
sw = black
ws = white

- E 1 – Lighting switch
- E 20 – Switches and instruments – lighting control
- F 22 – Oil pressure switch (0.3 bar)
- G 8 – Oil temperature sender
- G 9 – Oil temperature gauge
- G 10 – Oil pressure sender
- G 11 – Oil pressure gauge
- G 14 – Voltmeter
- J 166 – Instrument lighting amplifier
- L 28 – Cigarette lighter light bulb
- L 48 – Rear ashtray light bulb left
- T 2s – Connector 2 pin, brown, behind console
- T 6w – Connector 6 pin, white, behind console
- T 8e – Connector 8 pin, in engine compartment, right
- T 26 – Connector 26 pin, yellow, on dash panel insert
- U 1 – Cigarette lighter

- (A19) – Connection (58d), in dash panel wiring loom
- (A23) – Connection (30a1), in dash panel wiring loom
- * – up to 7/93
- ** – from 7/93

- (199) – Earth connection – 3 – , in dash panel wiring loom