


Dash panel insert, rev. counter, digital clock, lighting control

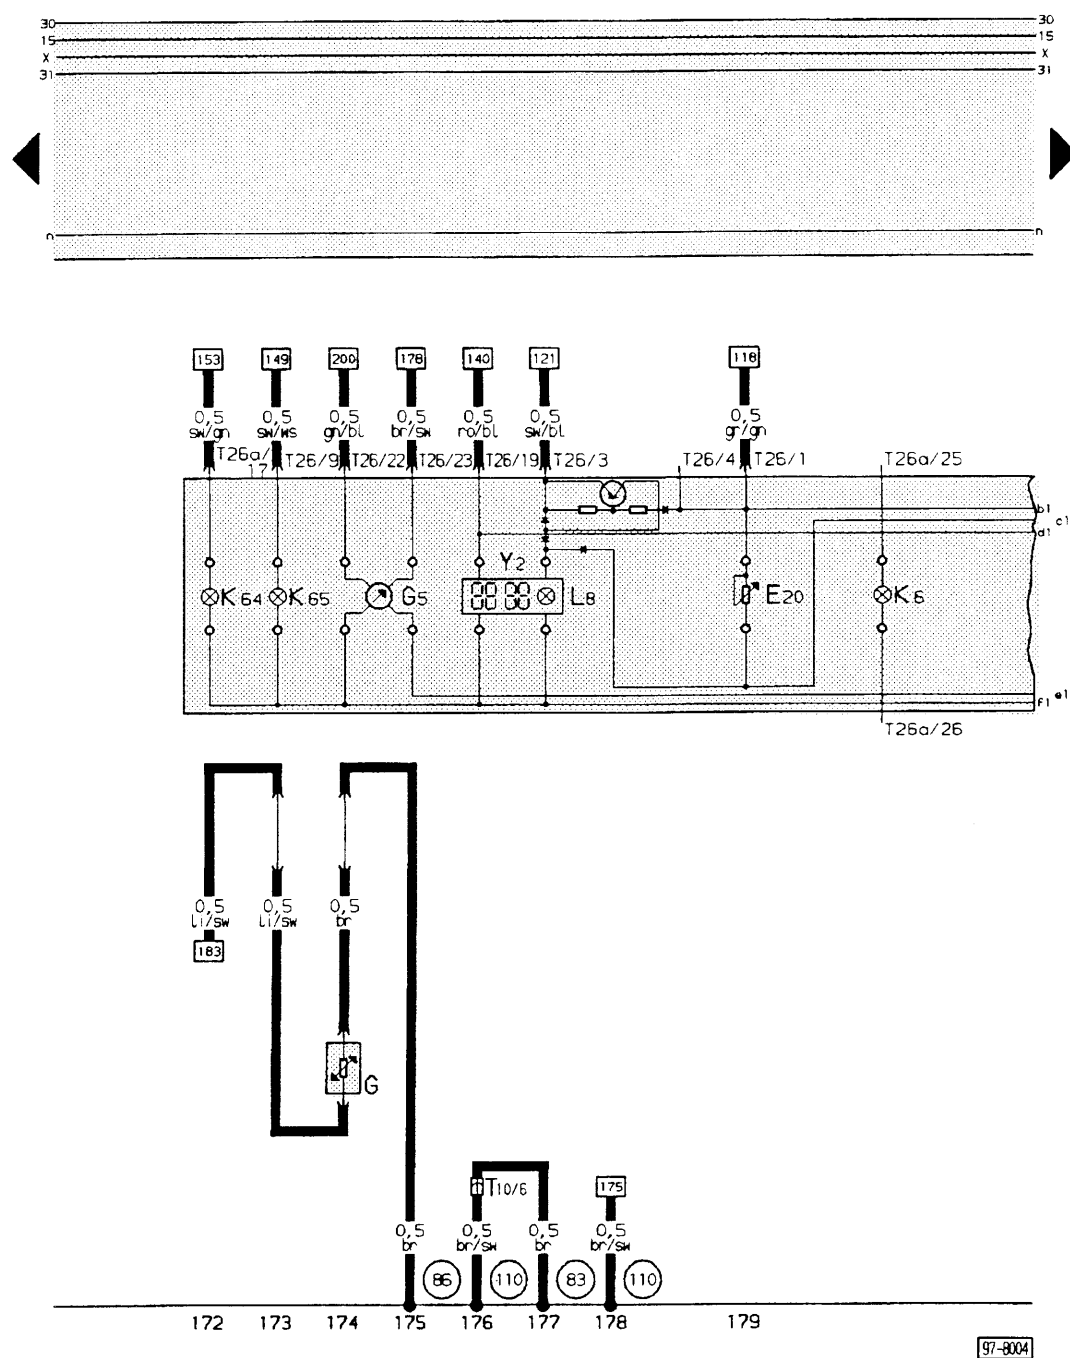

- E 20 – Switches and instruments – lighting control
- G – Fuel gauge sender
- G 5 – Rev. counter
- K 6 – Emergency light system warning lamp (not installed)
- K 64 – Emergency light and turn signal, right, warning lamp
- K 65 – Left turn signal warning lamp
- L 8 – Clock light bulb
- T 10 – Connector 10 pin, black, connection point in aux. relay carrier
- T 26 – Connector 26 pin, yellow, on dash panel insert
- T 26a – Connector 26 pin, blue, on dash panel insert
- Y 2 – Digital clock
- ⑧③ – Earth connection – 1 –, in front right wiring loom
- ⑧⑥ – Earth connection – 1 –, in rear wiring loom
- ⑪⑩ – Earth connection – 2 –, in dash panel wiring loom